


TOSHIBA

Color Television OWNER'S MANUAL

CN32D90/CN35D90

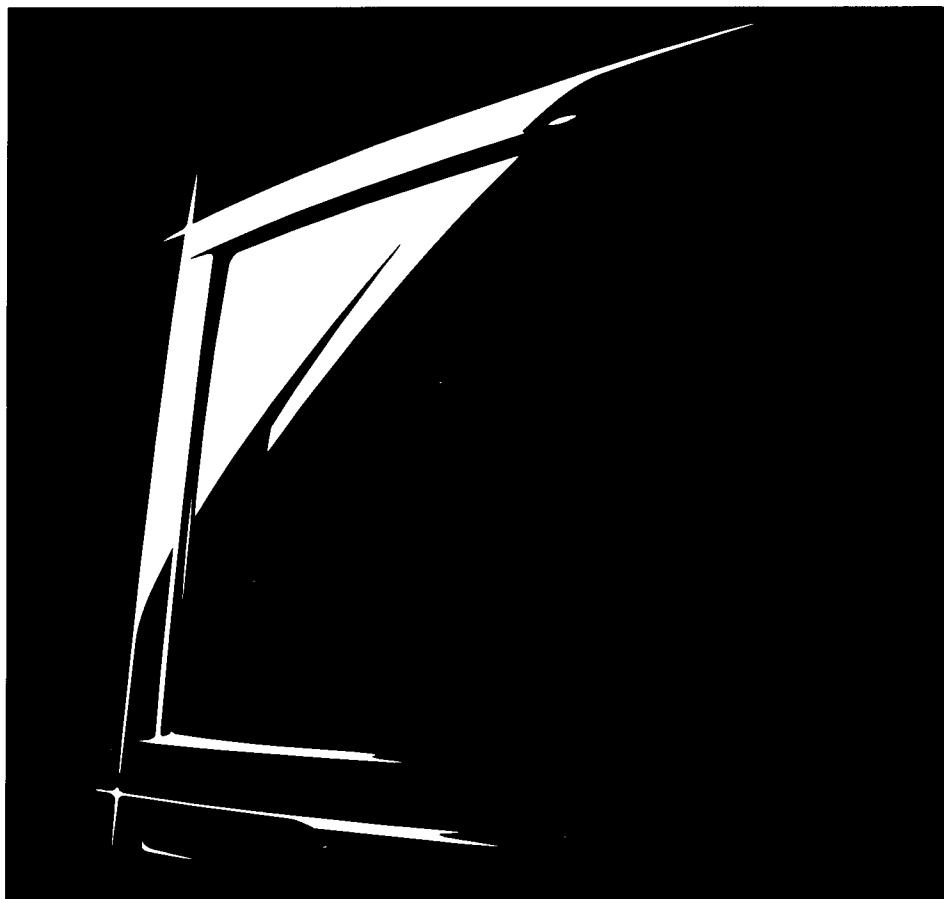

REFERENCE
SECTION

EQUIPMENT
CONNECTIONS

ADVANCED
OPERATION

BASIC OPERATION

PREPARATION

SET UP

Dear Customer

Congratulations! You have purchased one of the finest Color TV's on the market!

This manual will help you use the many exciting and useful features to make your TV viewing more enjoyable than ever before.

Before operating your TV set, please read all these safety and operating instructions completely and then retain for future reference.

* This manual applies to models CN32D90 and CN35D90

Customer's Record

You will find the model number and serial number on the back of your TV set.

Record these numbers in the spaces provided below. Refer to them whenever you call upon your TOSHIBA dealer regarding this product.


Model Number _____

Serial Number _____

SAFETY PRECAUTIONS

WARNING:

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

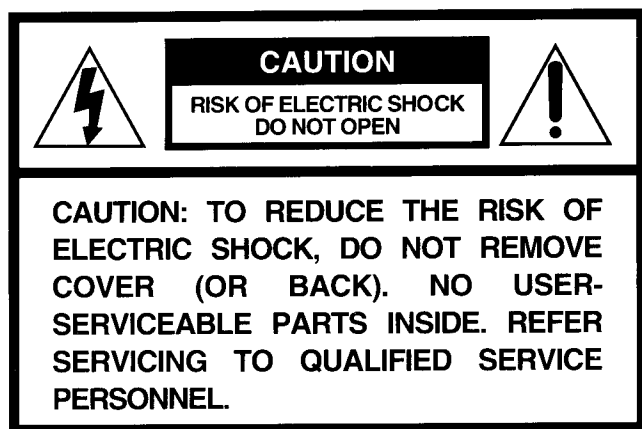

The lightning symbol in the triangle tells you that the voltage inside this product may be strong enough to cause an electric shock. DO NOT TRY TO SERVICE THIS PRODUCT YOURSELF.



The exclamation point in the triangle tells you that important operating and maintenance instructions follow this symbol.

CAUTIONS:

TO PREVENT ELECTRIC SHOCK, DO NOT USE THIS POLARIZED PLUG WITH AN EXTENSION CORD RECEPTACLE OR OTHER OUTLET UNLESS THE PRONGS CAN BE FULLY INSERTED INTO THE OUTLET TO PREVENT ANY EXPOSURE OF THE PRONGS ON THE POLARIZED PLUG.

Avoid displaying stationary images on your TV screen for extended periods of time. Stationary patterns generated by PIP display, computer displays, video games, stock market reports etc. can become permanently engrained on the picture tube. This damage is not protected by your warranty as it is the result of misuse. Should you wish to use your TOSHIBA Television to display still images, it is always advisable to reduce brightness and contrast settings. Never leave a PIP display, computer display or video game unattended.

This TV set may be used only with TOSHIBA stand model ST3204 (for CN32D90) or ST3504 (for CN35D90). Use with other stands may result in instability causing possible injury.

NOTE TO CATV SYSTEM INSTALLER:

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

TABLE OF CONTENTS

Set Up

Installing your TV set	4
Antenna/Cable TV general information	6
Home antenna connection	7
Cable TV connection	8
Antenna/Cable TV and VCR connections	9

Preparation

Location of controls (TV set)	11
Location of controls (Remote Control)	12
Before using the Remote Control	13
Using the Remote with VCR or	
Cable TV converter	14
Programming the Remote Control	15
Menu function (general instructions)	20
TV channels	22
Selecting the antenna input	23
Programming channel memory	24

Basic Operation

Watching TV programs	26
Convenient Remote functions	27
Adjusting the Picture	28
Adjusting the Sound	30
Selecting stereo/SAP broadcasts	31

Advanced Operation

Enhancing the Surround sound effect	32
Operating sub-woofer system "CYCLONE™" ..	34
Setting the off-timer and the clock	35
Watching Picture in Picture (PIP)	36
Captioning channels	38
Locking channels	40
Operating closed captioning feature	42
Changing on-screen display language	44
Activating on-screen demonstration	45
Activating Noise Reduction/	
Flesh Tone functions	46

Equipment Connections

Monitor panel	47
Connecting a standard VCR	48
Connecting a VCR with an S-video jack	49
Connecting a camcorder	50
Dubbing/editing programs with 2 VCRs	51
Connecting an audio amplifier	52
Connecting external speakers	53



Reference Section

Cleaning and care	54
Specifications	55
Before calling service personnel	56
Limited warranty	57

INSTALLING YOUR TV SET

UNPACK AND ACCESSORIES

When you unpack the package, be sure that it contains all the accessories shown below.

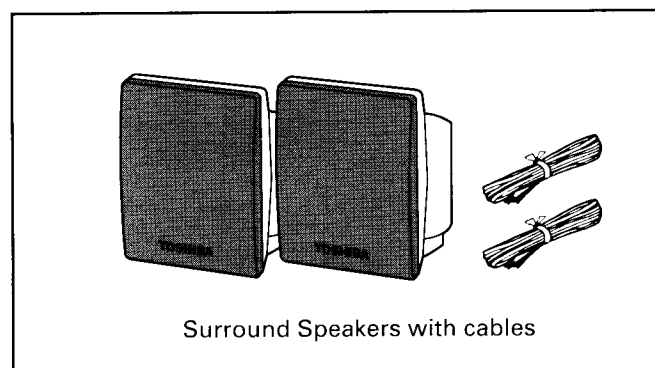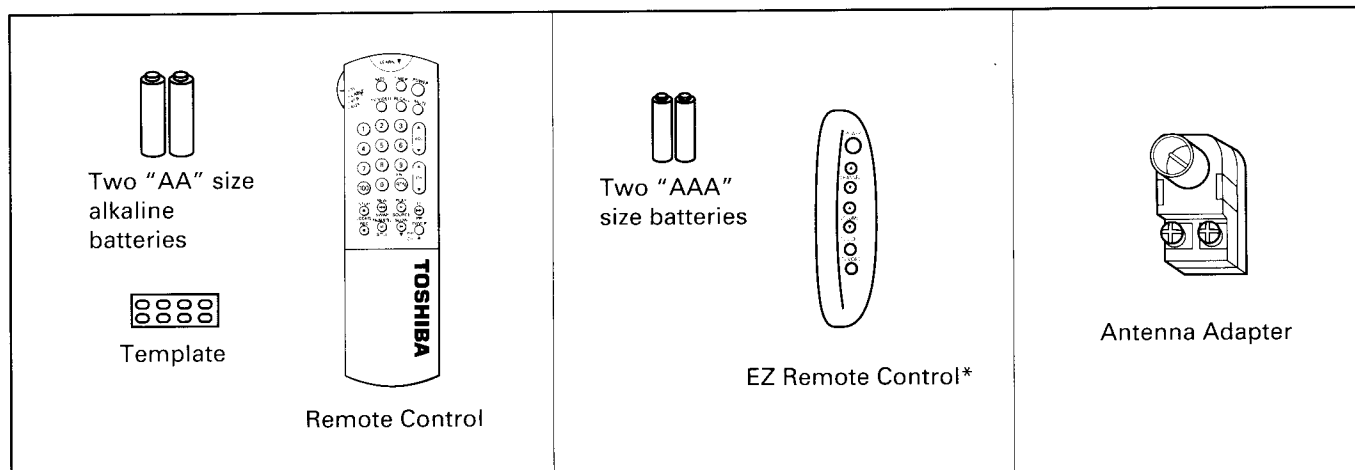

*The instructions for the EZ Remote Control are on separate sheet enclosed in this accessory package.

LOCATION AND POWER SUPPLY

Do not:

- Place your TV set in a room where direct lighting strikes the screen.
- Place your TV set too close to a wall, in a confined area or in a very warm location.
- Change the plug's safety prong.

WARNING:

TO AVOID INJURY TO A CHILD OR ADULT:


- Do not place the TV on an uneven floor or on unstable stand.
- Do not stand or climb on the TV.
- Do not put a VCR or any heavy object on top of the TV.

Do:

- Use soft and indirect lighting.
- Sit at least 6 feet away from the set.
- Provide normal air circulation for reliable long life.
- Plug into an electrical outlet with standard house power (120 volt AC, 60 Hz).


CAUTION:

As a safety feature, the AC plug has one prong wider than the other. It will fit only one way into a standard electrical outlet. If the plug will not fit into the outlet, try turning it around. If the plug will not fit either way, the outlet is probably old and non-standard. You will need to have a new outlet installed by an electrician.

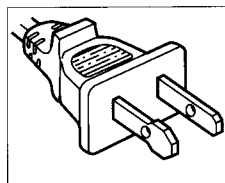

DO NOT CHANGE THE SAFETY FEATURE OF THE PLUG.


The Surround Speakers are packed in a separate box inside this container. Unpack the Speakers carefully and set them up as shown below.

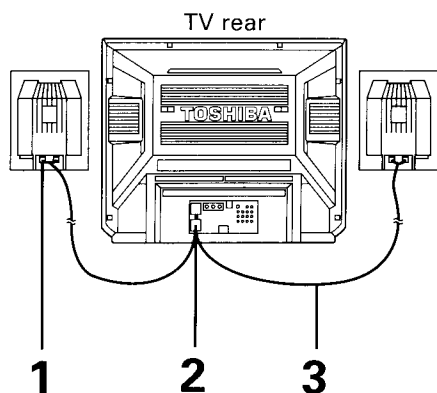

TO SET UP THE SURROUND SPEAKERS

Connection


- 1 Connect one end of the speaker cable to the terminals on the Surround Speaker.

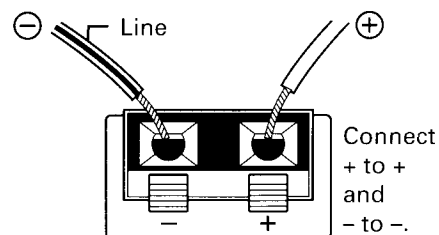

- 2 Connect the other end of the speaker cable to the "REAR SPEAKER" terminals* on the TV rear panel. While depressing the button, insert the cable. Then, release the button.

* Note:

The REAR SPEAKER terminals can be used only for the supplied speakers. Do not connect any other speakers to these terminals.

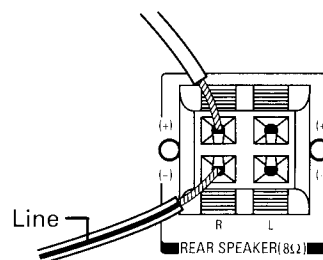

- 3 Connect another speaker following steps 1 and 2 above.

Mounting position


To enjoy the sound of the 4-channel DSP Surround, you must mount the speakers to the left and right, on a shelf or on a wall behind your normal viewing position. See page 32 for details on using the DSP feature.

Note:

You can get the best surround performance when you install the speakers slightly above your viewing position while watching TV.

CAUTIONS

- If the speakers are mounted on a wall, hang them from the opening provided on their back panels.
- Care should be taken when choosing speaker mounting hardware to insure compatibility with the material of the wall. Do not use mounting hardware with thin and/or soft wall materials, as the speaker may fall and cause personal injury or be damaged.

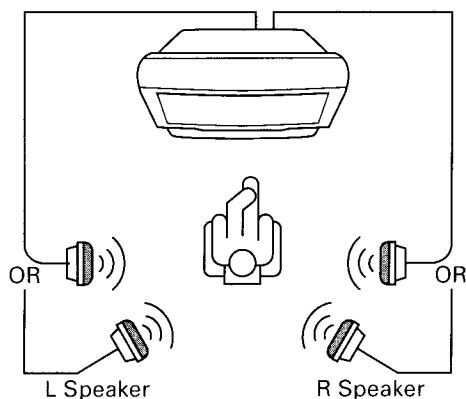


ANTENNA/CABLE TV GENERAL INFORMATION

- You can use either an indoor or outdoor antenna to receive VHF and/or UHF channels.
- Channels 2-13 are VHF channels, and channels 14-69 are UHF channels.
- We recommend using an outdoor antenna for better picture quality.
- You can receive Cable TV by contacting your local cable company.
- Cable TV delivers both VHF and UHF channels and other channels not available to your antenna.


TYPES OF ANTENNA CABLES

Shown below are two basic types of antenna cables. Signals from a home antenna may be conveyed by either type. Cable TV signals will always be conveyed by a 75 ohm coaxial cable.

 - 1 A 75 ohm coaxial cable is generally a round cable with F-type connectors that can easily be attached to a terminal without tools.




 - 2 A 300 ohm cable is a flat "twin-lead" cable that can be attached to a terminal through an antenna adapter supplied as an accessory.



ANTENNA CONNECTION PANEL


There are two separate 75 ohm F-type connector terminals and a converter output terminal as shown below.

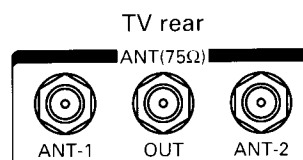


The ANT-1 and ANT-2 terminals are for connecting a VHF/UHF antenna or a cable TV system. The signal, which is input on ANT-1, is also output from the OUT terminal whenever the RF switcher in the TV is in the ANT-2 position. You can switch between the ANT-1 and ANT-2 positions by pressing the ANT 1/2 button on the Remote Control or the ANT/VIDEO button on the TV. See page 23.

HOME ANTENNA CONNECTION

Connecting a single lead-in cable

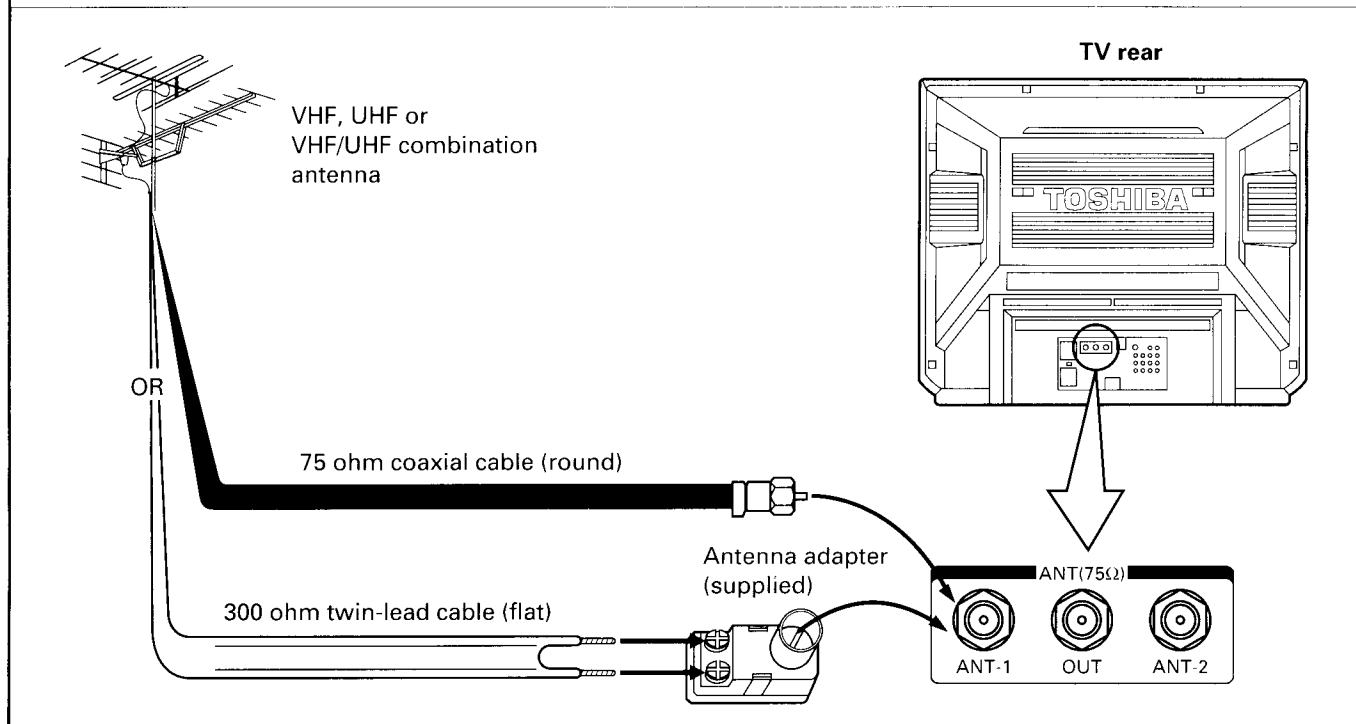

Connecting both VHF and UHF lead-in cables

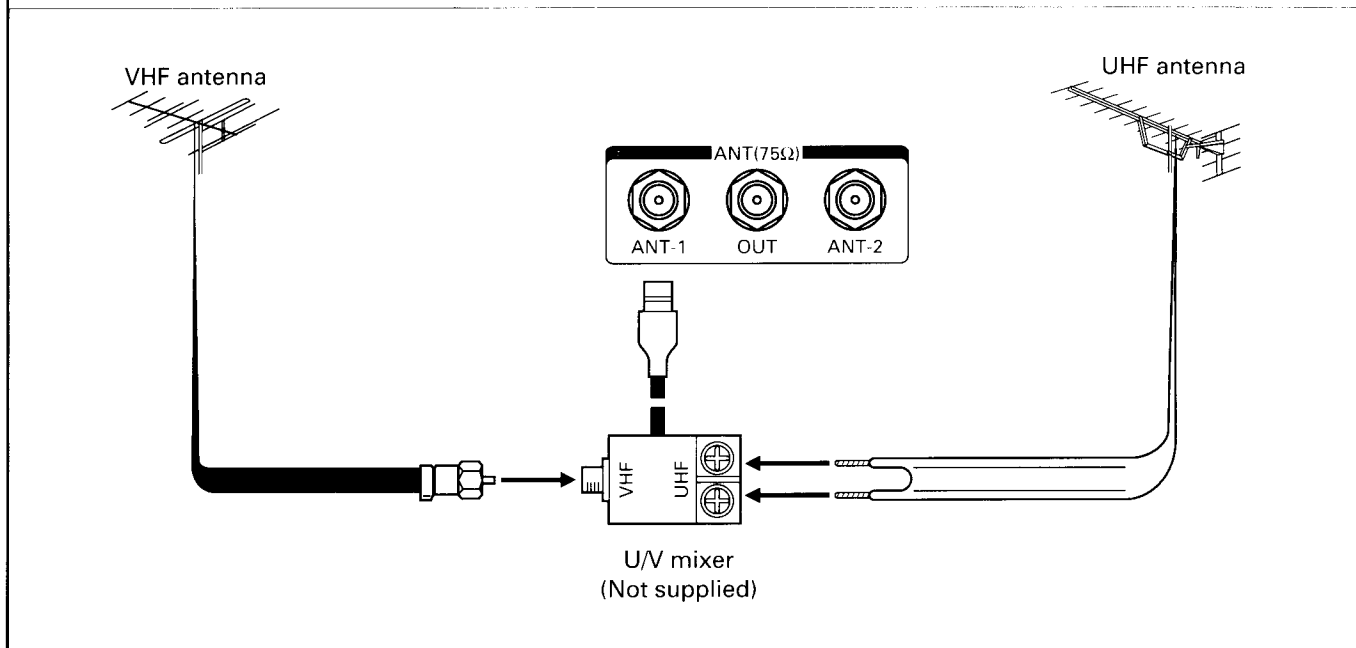

Note: You can connect another signal source like a cable TV system or video game to the ANT-2 terminal.

CABLE TV CONNECTION

Generally, the incoming cable for a Cable TV system can be connected directly to the TV antenna terminal just like a home antenna connection. Simply attach it to the ANT-1 (or ANT-2) terminal. You will be able to receive unscrambled cable channels.

Cable without a decoder box (Unscrambled channels)



Note: You can connect another signal source like a home antenna or video game to the ANT-2 terminal.


Some cable companies offer "premium pay channels". Since the signals of these premium pay channels are scrambled, a cable TV converter/decoder is generally provided to the subscriber by the cable TV company. This decoder box is necessary for normal viewing of the scrambled channels. For more specific instructions on installing cable TV, consult your cable TV company.

Cable with a decoder box (Unscrambled and Scrambled channels)

You can choose between viewing unscrambled channels and scrambled channels by pressing the ANT 1/2 button or the ANT/VIDEO button. See page 23.


Unscrambled channels will come thru the ANT-1 terminal when the "ANT 1" mode is selected. The scrambled channels from the decoder box will come thru the ANT-2 terminal when the "ANT 2" mode is selected. Place your TV on channel 3 or 4 to match your converter's output channel and select channels using the converter's channel keys.

Note: The descrambler device may or may not be a part of the cable converter.

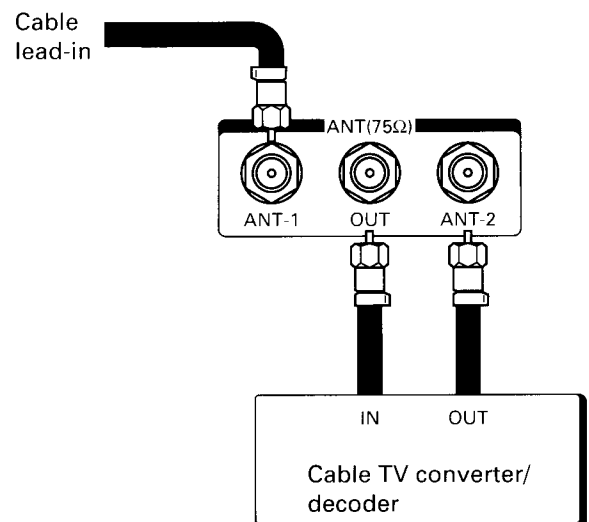

ANTENNA/CABLE TV AND VCR CONNECTIONS


Antenna/Cable connection via VCR (simplified method)

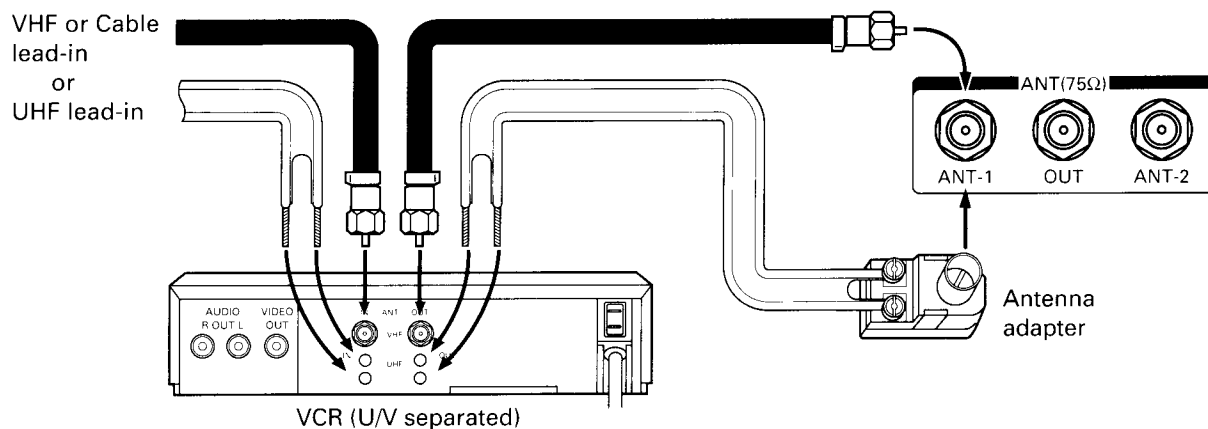

Notes:

- On many VCR's, playing tapes causes the VCR's TV/VCR switching to disconnect the antenna signals from the TV. If you cannot select a certain channel, try pressing the TV/VCR button on the Remote Control.
- If you connect both VHF and UHF lead-in cables, use an optional U/V mixer. See page 7.


Using a 2-way signal splitter

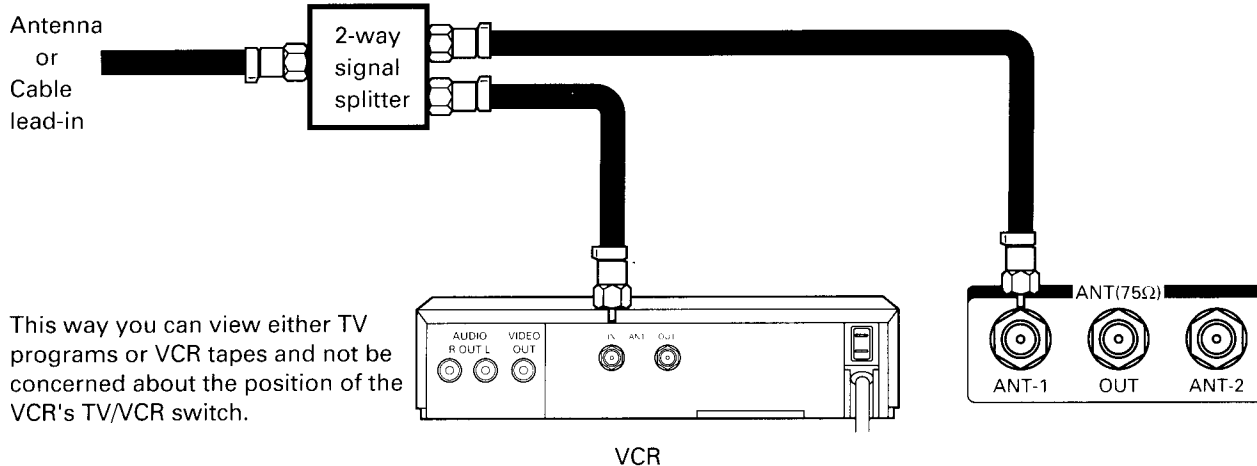

Note: When connected either way, the VIDEO/AUDIO connections from the VCR to the TV are required for (stereo) playback from VCR's. See page 47 for connection details.

ANTENNA/CABLE TV AND VCR CONNECTIONS (Continued)

Cable with a decoder box and a VCR

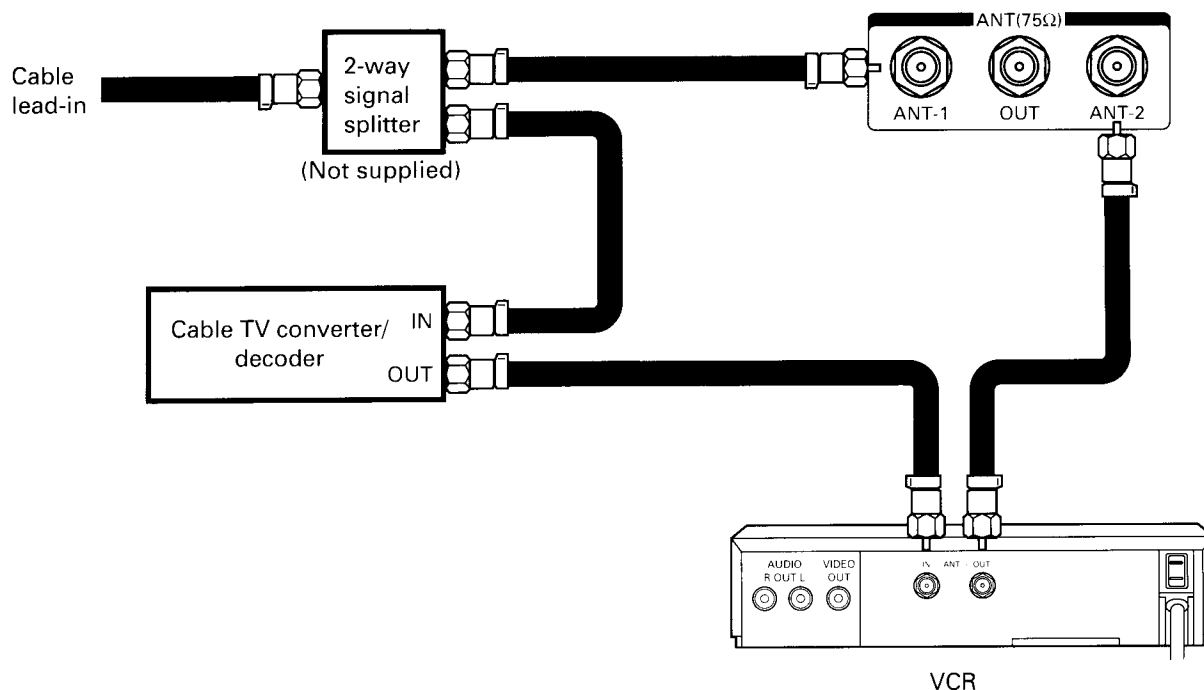

The unscrambled channels will come thru the ANT-1 terminal whenever the ANT 1/2 button or the ANT/VIDEO button is in "ANT 1" mode.


The scrambled channels from the decoder box will come thru the VCR and the ANT-2 terminal whenever the ANT 1/2 button or the ANT/VIDEO button is in "ANT 2" mode. Place your TV and VCR on channel 3 or 4 to match your converter's output channel. See page 23.

Note: When connected this way, the VIDEO/AUDIO connections from the VCR to the TV are required for stereo tape playback from stereo VCR's. See page 47 for connection details.

LOCATION OF CONTROLS (TV Set)

For specific use of each control, consult the corresponding page numbers in brackets.

Front view

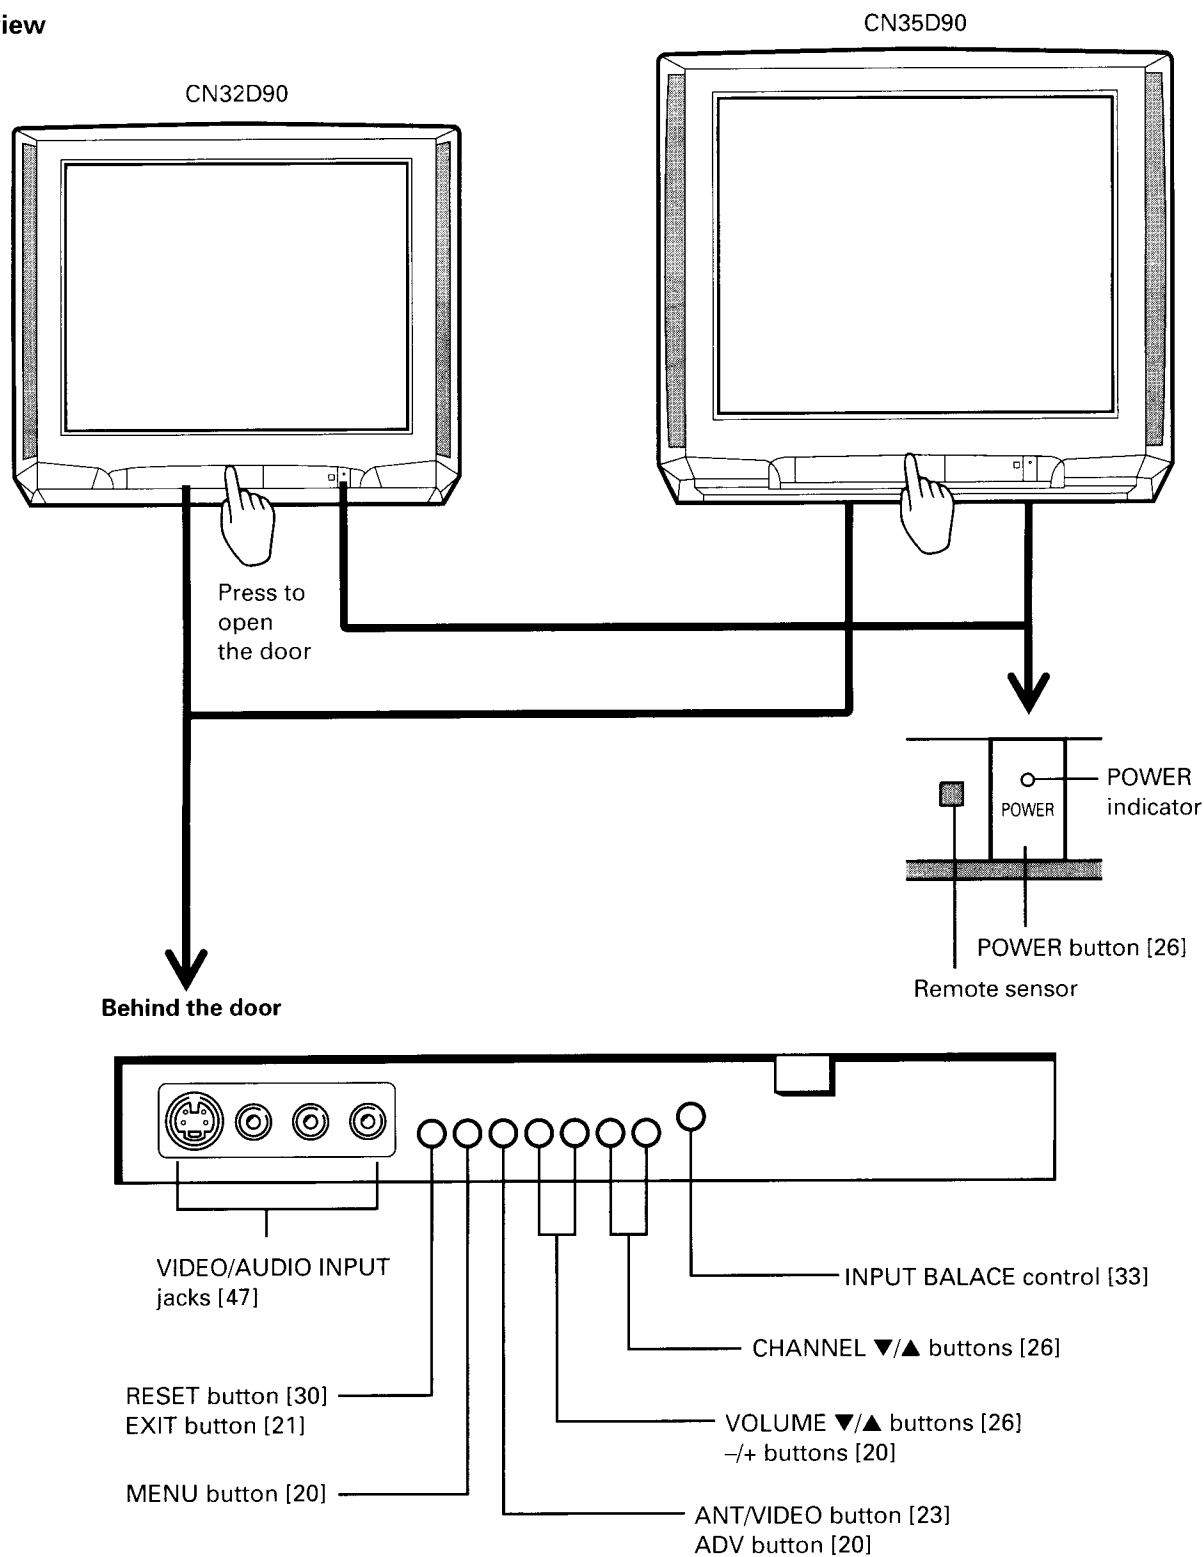

SET UP


PREPARATION

Antenna/Cable TV and VCR connections
Location of controls (TV set)

LOCATION OF CONTROLS (Remote Control)

Only the buttons that are used to operate the TV set are described here.
For details on the use of each control, refer to pages in brackets.

Aim at the remote sensor on the TV

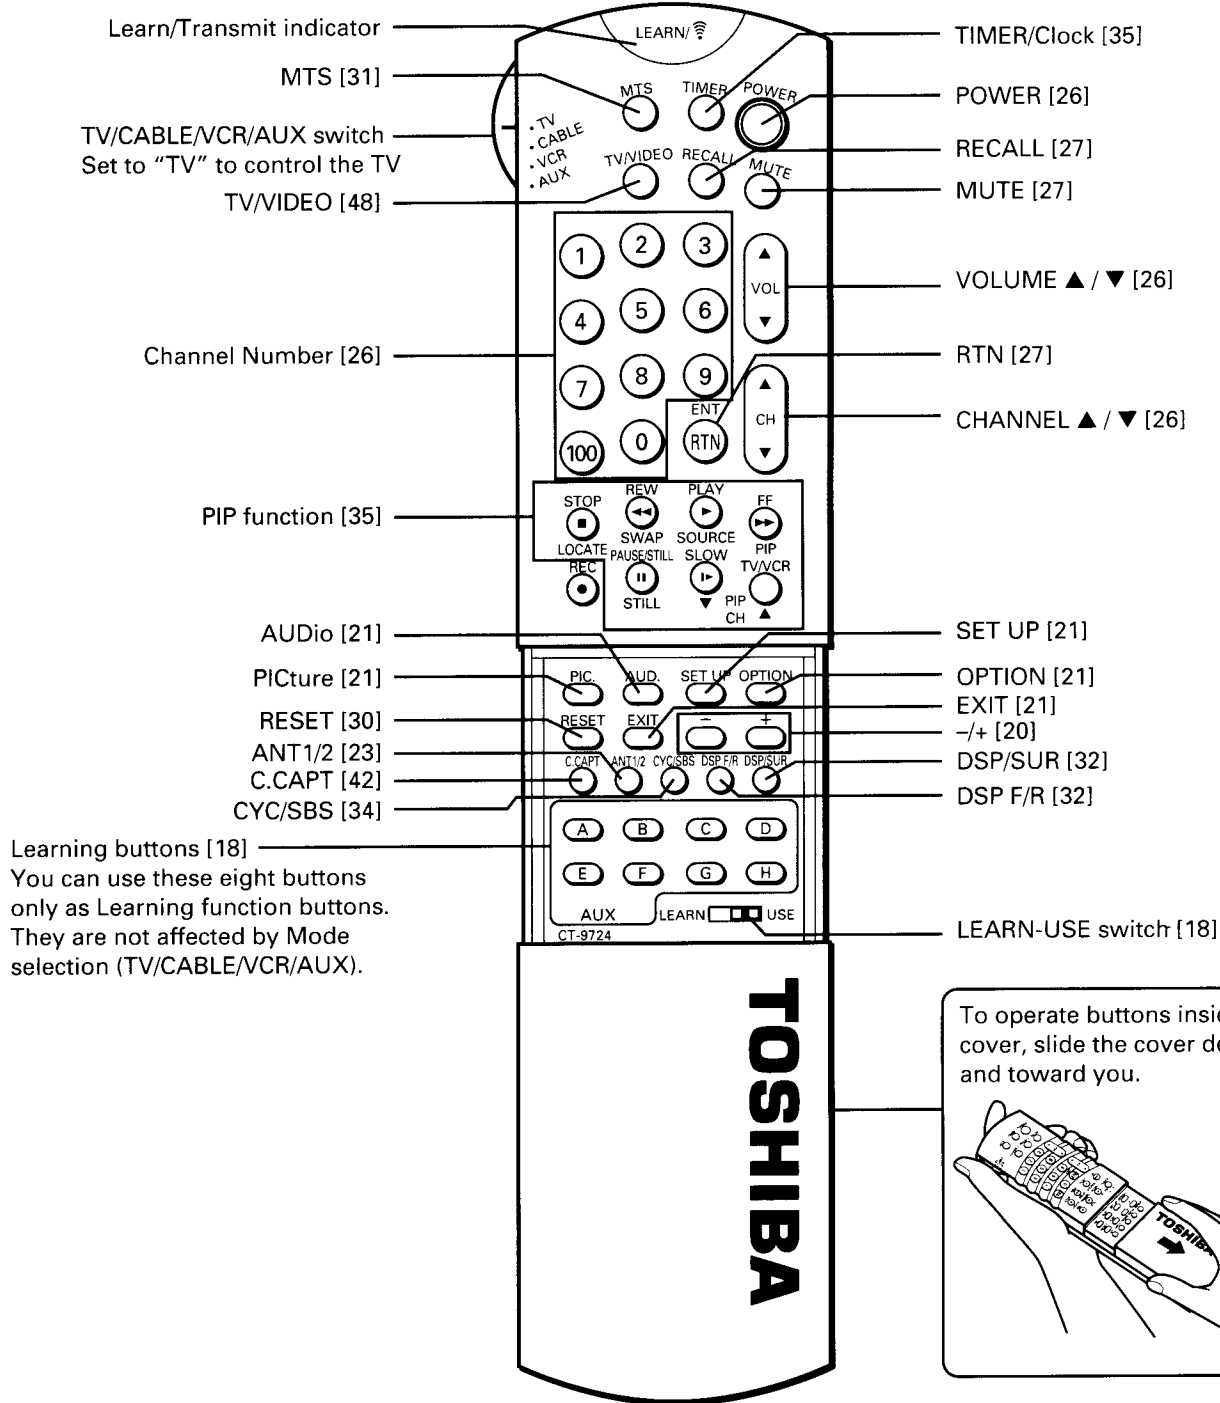

BEFORE USING THE REMOTE CONTROL

INTRODUCTIONS

With this Remote Control, you can operate your TV and most models of remote-controlled VCR's and Cable TV Converters even if they are different brands. See page 15. However, this Remote Control must be programmed to control other brands of VCR's and/or Converters. If you will be using your TV set with a TOSHIBA VCR, your remote has already been preprogrammed for you.

Further, this Remote Control is capable of learning operating codes from most infrared remote control transmitters. See page 18.


- Before attempting to operate your Remote Control, install the batteries according to the section "INSTALLING AND REPLACING BATTERIES" shown below.

Notes:


- After installing new batteries, the Remote Control will set itself to the codes for TOSHIBA's TV and VCR. If you are using the Remote Control to operate equipment that uses different codes, it will have to be reprogrammed for those codes.
- This Remote Control may have functions not available on the original remote control.
- These functions may or may not operate your VCR or Cable TV Converter. Refer to the owner's manuals supplied with the equipments to see which functions are available.
- The remote control supplied with your VCR or Cable TV Converter may have keys not duplicated on this Remote Control. If these functions are desired, the original remote will have to be used.

INSTALLING AND REPLACING BATTERIES

- 1 Place the Remote Control with the face down. Press down on the ridged area of the battery cover and slide it off.

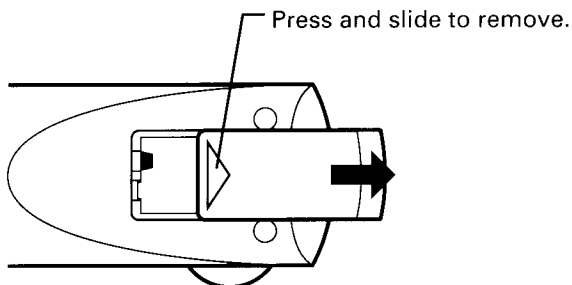

- 2 Place two "AA" size alkaline batteries, matching the + and - signs on each battery to the + and - signs of the battery compartment.

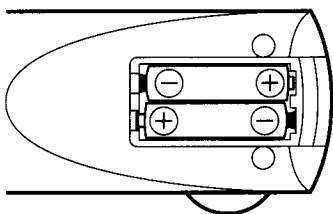

- 3 Replace the battery cover until the lock snaps.

TIPS FOR BEST OPERATION

- For optimum performance, aim the Remote Control directly at the TV from a distance no more than 28 ft (8.5m) and be sure there is no obstruction between the Remote Control and the TV.
- If your Remote Control does not always adjust the TV as you wish, you probably need to replace the batteries. Use alkaline batteries for longer use.
- Remove dead batteries immediately to prevent battery acid from leaking into the battery compartment.
- If you do not intend to use the Remote Control for a long period, remove the batteries.


CAUTION:


- Do not throw your batteries into a fire. Dispose of your batteries in a designated disposal area.
- Do not combine used old batteries with new ones.
- Do not mix battery types.

USING THE REMOTE WITH VCR OR CABLE TV CONVERTER

- To control TOSHIBA VCR, first set the TV/CABLE/VCR/AUX switch to "VCR" position. The buttons shown below will then control the VCR. The rest of the buttons operate the TV as usual.
If you have another brand of VCR, you can probably program your Remote to control it.
Details are on page 15.
- To control a cable TV converter, this Remote Control must be programmed to recognize the brand of your converter.
See page 15.
Set the TV/CABLE/VCR/AUX switch to "CABLE" position whenever you control the cable TV converter.


Aim at the VCR or cable TV converter

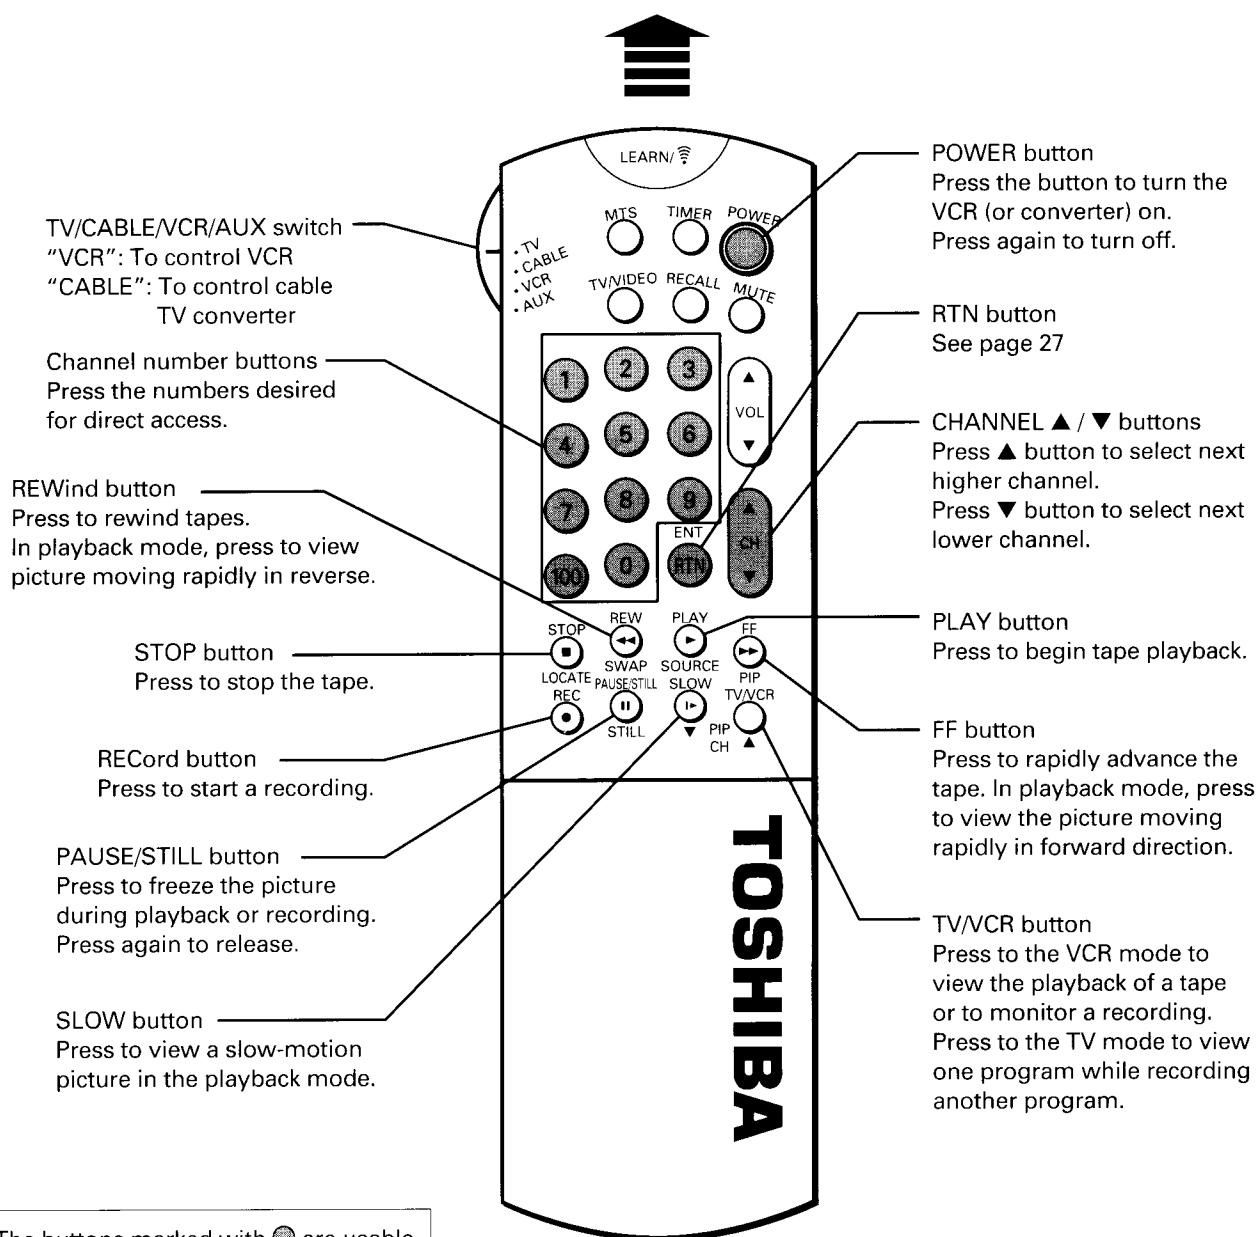

The buttons marked with  are usable to control the cable TV converter

PROGRAMMING THE REMOTE CONTROL

- This Remote Control is preprogrammed to operate TOSHIBA VCR's.
- To use VCR's other than Toshiba models (or Cable converter), perform the following procedures before operating.

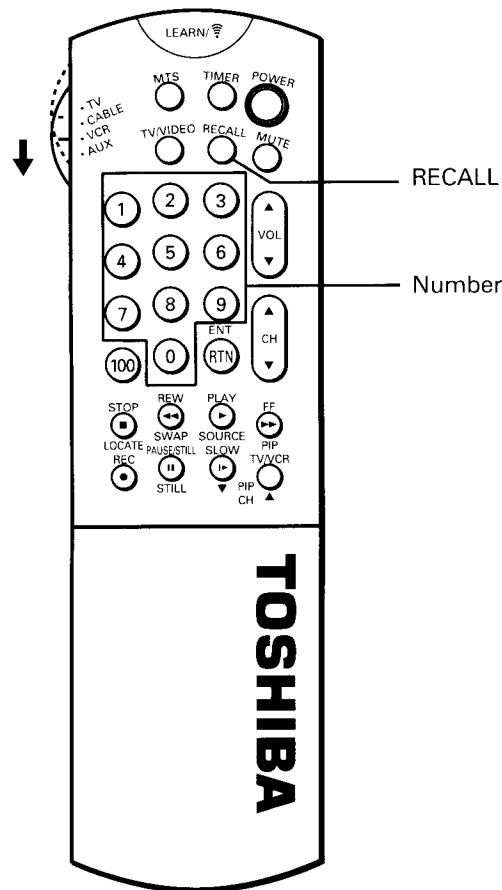

TO CONTROL OTHER BRANDS OF VCR'S AND CABLE TV CONVERTERS

- 1 Refer to the "**VCR code table**" (or "**Cable TV converter code table**") on pages 16 and 17 to find the code number that corresponds to the brand name of your VCR (or your converter).

If more than one number is listed, try each one separately until you find the one that works.

- 2 Set the TV/CABLE/VCR/AUX switch to VCR (or CABLE).

- 3 Hold down **RECALL** while pressing the **Number** buttons for the three digit code number for your brand of VCR (or converter). The transmit indicator lights up for 1 second when the programming is completed.

When an operation error has occurred, the indicator blinks. Press **RECALL** again to reset.

- 4 Point the Remote Control at the VCR (or at the converter) and press **POWER** to test the code number.
 - If the right number was entered, the VCR should turn on.
 - If the VCR does not respond to the Remote Control, repeat steps 1 to 4 with another code number.

Notes:

- You have to reprogram the Remote Control when you change its batteries.
- Some newer VCR's are capable of working on either of two remote codes. These VCR's have a switch labeled "VCR1/VCR2". If your VCR has this kind of switch, and does not respond to all the code numbers for your VCR brand name, set the switch to another position ("VCR1" or "VCR2") and reprogram the Remote Control.

For future reference, write the code you used.

VCR CODE: _____

CABLE CODE: _____

PROGRAMMING THE REMOTE CONTROL (Continued)

- The code numbers listed below are the newest ones at the time of printing. New code numbers may or may not have been added since printing.


VCR code table

BRAND NAME	CODE NUMBER	BRAND NAME	CODE NUMBER	BRAND NAME	CODE NUMBER
Aiko	297	Goodmans.....	019,039,056,081, 091,297	Osaki	019,056,091
Aiwa	019	Gradiente.....	019	Otto Versand	100
Akai	060,068,080,125, 261	Graetz.....	060,123	Pallidium.....	091
Alba	039,228,297	Granada	065,100,123	Panasonic	054,096,244
Amstrad	019	Grundig.....	100	Penney	054,056,057,059, 061,259
Anitech.....	091	Harman/Kardon....	057	Pentax	061,084,124
ASA	056,100	Hem.....	091	Perdio	019
Audiovox	056	Hinari.....	091,227	Philco	054
Baird.....	123	Hitachi	019,060,061,084, 124	Philips	054,081,100,129
Bell & Howell.....	123	Imperial.....	019	Phonola.....	100
Broksonic.....	140,203,230	Interfunk.....	100	Pilot	056
Bush	091,228,297	ITT	060,065,123,125	Pioneer.....	086,100
Canon.....	054	JCL	054	Portland	039
Capehart	039	Jensen.....	060	Proline.....	019
Carver.....	100	JVC.....	027,060,086	Pulsar	058
CCE.....	091,297	Kendo.....	125	Pye.....	100
CGE	019	Kenwood.....	057,060,065,086	Quartz.....	065
Cimline.....	091	Lloyd	019	Quasar.....	054,115
Condor	039	Loewe.....	056	Quelle.....	100
Craig.....	066,259	Loewe opta.....	100	Radiola.....	100
Crown.....	297	Logik.....	019,259	RCA	054,061,084,096, 124,168,221
Curtis Mathes	054	Luxor.....	062,065,125	RCA Unified.....	079
Daewoo.....	039,064,065,297	LXI	056	Realistic.....	019,054,056,065, 066,067,081,085, 123,259
Dansai	091	Magnavox.....	019,054,100,129, 168	Rex	060
Daytron.....	039	Manesth.....	064,091	Ricoh	053
De Graaf.....	061	Marantz	054,057,081,100	Roadstar.....	056,091,259
Decca.....	019,100	Marta.....	056	Runco	058
Dual	060	Matsui	227,228	Saba	060
Dumont.....	019,100,123,124	MEI	054	Saisho	227,228
Dynatech.....	019	Memorex	019,054,056,058, 065,066,067,123	Salora.....	062,065,125
Electronic.....	019	MGA.....	062,080	Samsung.....	064,259
Emerson.....	019,021,056,080, 140,203,227,228, 230,231,313	Minolta.....	061,124	Sansui	060,086
ESC.....	297	Mitsubishi.....	062,080,086,100, 192,233,261	Sanyo	065,066,123,259
Ferguson.....	060	MTC.....	019,259	SBR.....	100
Fidelity	019	Multitech.....	019,091	Scaub Lorenz.....	019,060
Finlandia	100,123,129	Murphy	019	Schneider.....	019,091,100,129
Finlux	019,061,100,123, 124	NEC	057,059,060,069, 086	Scott	064,140,203,229, 231
First line	062,091	Neckermann	100	Sears	054,056,061,065, 066,073,085,123, 124
Fisher	065,066,073,085, 123	Nikko	056	SEI	100
Frontech.....	039	Noblex.....	259	Sentra.....	039
Funai	019	Nokia.....	060,065,123,125, 259	Sharp.....	076,081
GE.....	054,079,084	Nordmende	060	Shintom	091
GEC	100	Optonica	067,081	Siemens.....	056,123
General	071	Orion	140,227,228	Sinudyne.....	100
Go Video.....	251,298				
Goldstar	056,057				

Cable TV converter code table


BRAND NAME	CODE NUMBER	BRAND NAME	CODE NUMBER	BRAND NAME	CODE NUMBER
Sony	051,052,053,054	ABC	026,030,032,036	Unika	172
STS	061	Archer	058,172	United Artists	026
Sunstar	019	Century	172	United Cable	022
Sylvania	054,062,100,129	Citizen	172	Universal	058,096,172,210
Symphonic	019	Colour Voice	044,050	Viewstar	046,079
Tashiko	019	Comtronics	059,079	Zenith	019
Tatung	019,060,100	Eastern	021		
Teac	019,060	Garrard	172		
Technics	054	Gemini	034,089		
Teknika	019,054,056,071	General			
Telefunken	060,206	Instrument	030		
Tenosal	091	Hamlin	028,039,278,292		
Tensai	019	Hitachi	030		
Thomson	060	Jasco	172		
Thorn	060	Jerrold	022,030,031,033, 034,043,045		
Toshiba	060,062,064,085, 229,231,385	Macom	052		
Totevision	056,259	Magnavox	046		
Triumph	227	Memorex	019		
Unitech	259	Movie Time	175		
Universum	019,056,068,100, 125	NSC	089,175		
Vector Research	057,059	Oak	026,038		
Victor	027,060,086	Panasonic	040		
Video Concepts	059,080	Paragon	019		
Videosonic	259	Philips	044,046,047,048, 049,050,079		
Wards	019,054,061,066, 067,081,09 1,168,231,259	Pioneer	163		
Yamaha	057,060	Pulsar	019		
Yoko	259	PVP Stereo			
Zenith	052,053,058	Visual Matrix	022		
		RCA	040		
		Regal	039,278,292		
		Regency	021		
		Rembrandt	089		
		Runco	029		
		Samsung	059,163		
		Scientific Atlanta	025,027,036,296		
		Signal	034,059		
		Signature	030		
		SL Marx	059		
		Sprucer	040		
		Standard			
		Components	174		
		Starcom	022,034		
		Stargate	034,059		
		STS	175		
		Tocom	031,032,078		
		Toshiba	019		

PROGRAMMING THE REMOTE CONTROL (Continued)


- This Remote Control is capable of learning operating codes from most infrared remote control transmitters. You can control the functions of your TV and a variety of video/audio equipment with the supplied Remote Control only.
- The 31 buttons  can be used as Learning buttons.

TO LEARN OPERATING CODE OF ANOTHER REMOTE CONTROL

1 Set the TV/CABLE/VCR/AUX switch to "AUX".

2 Set the LEARN-USE switch to "LEARN" 

3 Place the supplied Remote Control and the remote control transmitter to be learned, head to head approximately 1 to 3 inches (3 to 8cm) apart.

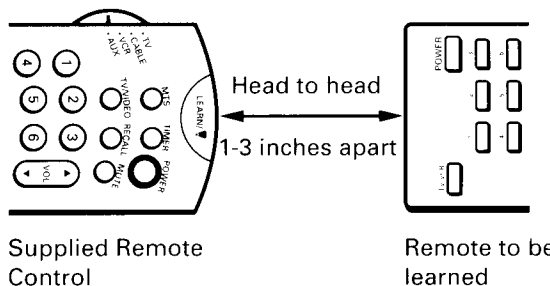


4 Hold down the button to learn on the supplied Remote Control for about 1 second until the LEARN indicator lights up.
When you press a button other than a Learning button, the indicator will blink.

5 Hold down the function button to be learned on the remote control transmitter for about 3 seconds until the LEARN indicator goes off.


Note:

If the LEARN indicator blinks, the supplied Remote Control cannot learn the operating code or an error has occurred.
Try steps 4 and 5 again.


6 Repeat steps 4 and 5 for other function keys.

7 Set the LEARN-USE switch to "USE". 


8 To check your programming, operate the appropriate equipment with the supplied Remote Control. If the equipment does not operate as expected, repeat steps 1 to 7.
If needed, try changing the distance between the two remote controls.

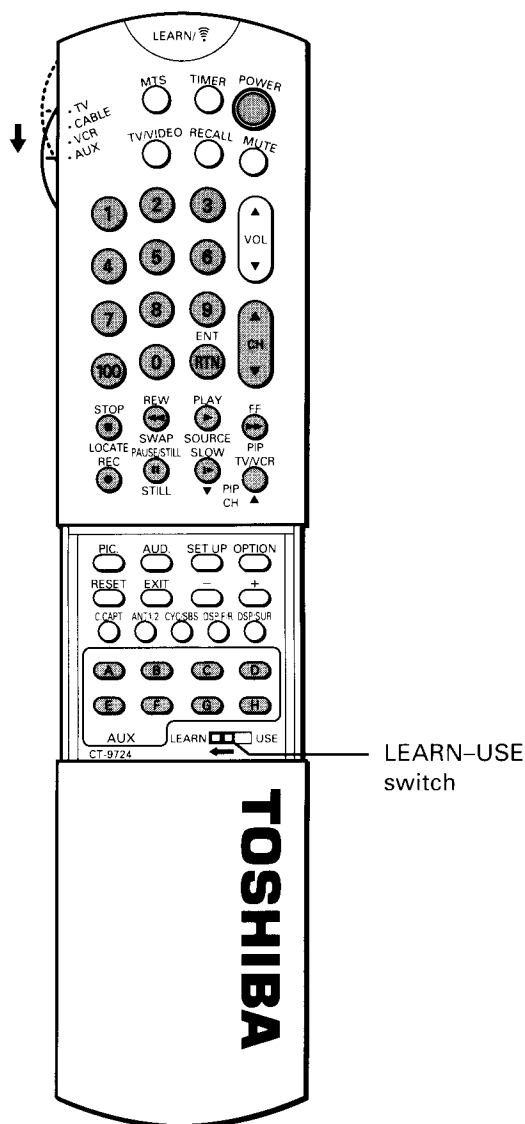

- 9 Attach the supplied template to the Remote Control to enter the function names of the AUX buttons you have programmed. Use a ballpoint pen etc. to write the function names.

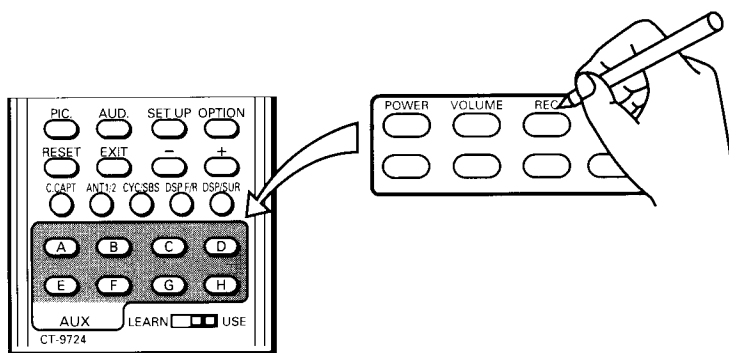


TO CANCEL THE LEARNED OPERATING CODES

- 1 Set the TV/CABLE/VCR/AUX switch to AUX.
- 2 Set the LEARN-USE switch to LEARN. LEARN  USE
- 3 Hold down the button of the function to cancel on the Remote Control for about 1 second until the LEARN indicator lights up.
- 4 Hold down **RECALL** and **RESET** at the same time for about 6 seconds until the LEARN indicator goes off after blinking.

Note:


You cannot cancel the programming if you release the button while the indicator is blinking.

- 5 Set the LEARN-USE switch to USE. LEARN  USE

MENU FUNCTION (General Instructions)


We suggest you familiarize yourself with the procedure before using the Menu function.

To adjust any TV feature, the use of the Menu function is required. The adjustments that can be made to the TV appear on the screen.

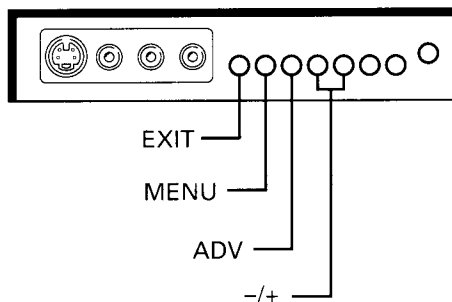

MENU BUTTON (on TV)

Each time you press **MENU**, the PICTURE, AUDIO, SET UP or OPTION menu on-screen display is selected in order, then press **ADV**.

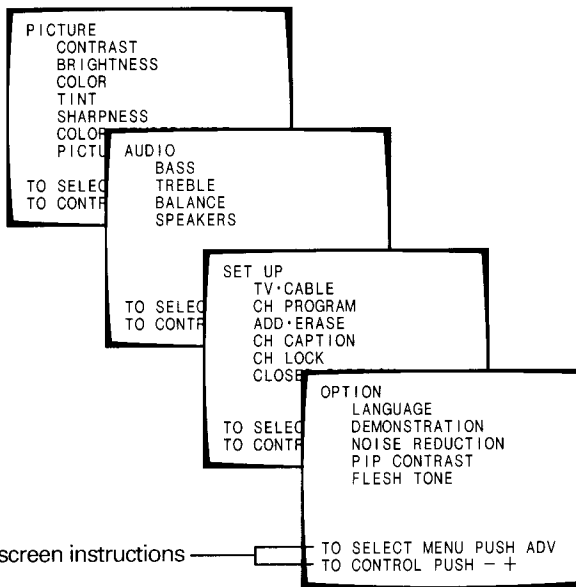

ADV BUTTON (on TV)

Use this **ADV** after you have pressed **MENU** to select the function you want to adjust.


Each time you press **ADV**, the function to be adjusted will be selected in order.

The selected function will be displayed in magenta.


-/+ BUTTONS (on TV and on Remote)

Use these **-/+** after you have pressed **ADV** or any of the four menu buttons (**PIC**, **AUD**, **SET UP** or **OPTION**).

Example: CONTRAST adjustment mode display

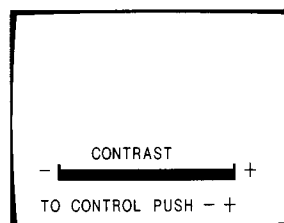

Pressing + increases the picture contrast.
Pressing - increases the picture contrast.

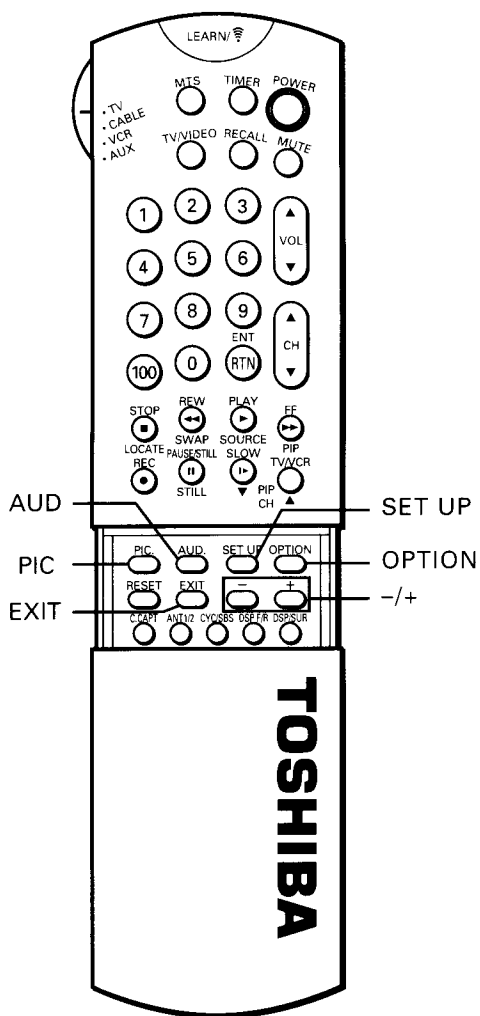

PIC (Picture) BUTTON (on Remote)

Press **PIC** repeatedly until the PICTURE menu function you want to adjust is selected. The selected function will be displayed in magenta, then press **-/+** to adjust the setting. Details for each function begin on page 28.

PICTURE
CONTRAST
BRIGHTNESS
COLOR
TINT
SHARPNESS
COLOR TEMPERATURE
PICTURE PREFERENCE
TO SELECT MENU
PUSH PIC
TO CONTROL PUSH - +

AUD (Audio) BUTTON (on Remote)

Press **AUD** repeatedly until the AUDIO menu function you want to adjust is selected. The selected function will be displayed in magenta, then press **-/+** to adjust the setting. Details for each function begin on page 30.

AUDIO
BASS
TREBLE
BALANCE
SPEAKERS

TO SELECT MENU
PUSH AUD
TO CONTROL PUSH - +

SET UP BUTTON (on Remote)

Press **SET UP** repeatedly until the SET UP menu function you want to adjust is selected. The selected function will be displayed in magenta, then press **-/+** to adjust the setting. Details for each function begin on page 24.

SET UP
TV·CABLE
CH PROGRAM
ADD·ERASE
CH CAPTION
CH LOCK
CLOSED CAPTION

TO SELECT MENU
PUSH SET UP
TO CONTROL PUSH - +

OPTION BUTTON (on Remote)

Press **OPTION** repeatedly until the OPTION menu function you want to adjust is selected. The selected function will be displayed in magenta, then press **-/+** to adjust the setting. Details for each function begin on pages 37 and 44.

OPTION
LANGUAGE
DEMONSTRATION
NOISE REDUCTION
PIP CONTRAST
FLESH TONE

TO SELECT MENU
PUSH OPTION
TO CONTROL PUSH - +

EXIT BUTTON (on TV and on Remote)

The above four menu displays will automatically disappear from the screen if no control has been operated for about 15 seconds, and all other menu displays also disappear after about 6 seconds.

If you want to clear the screen of all on-screen displays instantly, press **EXIT**.

Notes:

- The ADV button on the TV will function as the ANT/VIDEO button when no menu display is on the screen.
- The **-/+** buttons on the TV will function as the VOLUME **▼/▲** buttons when no menu display is on the screen.
- The EXIT button on the TV will function as the RESET button when no menu display is on the screen.

TV CHANNELS

This TV will receive the following TV signals:

1. TV: Off the air TV signals. (VHF channels 2 thru 13 and UHF channels 14 thru 69)
2. STD CABLE: Standard (or IRC: Incremental Related Carrier) cable TV signals.
3. HRC CABLE: Harmonic Related Carrier cable TV signals.
4. IRC CABLE: Incremental Related Carrier cable TV signals.

For each of these systems, your TV has exact frequencies built into it to ensure precise tuning. For precise tuning, the TV/CABLE function must be set to match your TV or CABLE system. (See page 24.) The following chart shows channels available in each system and how your TV displays them. When you connect your TV to a cable TV system and if you are not sure what system they are using, proceed with the following section "HOW TO FIND YOUR TYPE OF CABLE SYSTEM" or consult your local cable company to check if your system is STD, HRC or IRC.

HOW TO FIND YOUR TYPE OF CABLE SYSTEM

- 1** Select the "STD CABLE" mode following the instructions on page 24.
- 2** Select various channels and confirm whether the channel will lock immediately with perfect picture. If the channels seem to take a few seconds to lock in, your cable system may be one of the other cable systems. In this case, continue with the following steps.
- 3** Select the "HRC CABLE" mode and try above procedure again.
- 4** If you are having problem with only channel 5 or 6, you may have an IRC system so change the mode to the "IRC CABLE".

TV/CABLE CHANNEL REFERENCE CHART

Number on this TV	Corresponding channel number		14	14	A	70		70
	TV off the air	Cable TV STD/HRC/IRC	15	15	B	71		71
		
			35	35	V	93		93
1	—	A-8	36	36	W	94		94
2	2	2	37	37	AA	95		A-5
3	3	3	38	38	BB	96		A-4
4	4	4	97	Not used	A-3
5	5	5 (A-7)	61	61	YY	98		A-2
6	6	6 (A-6)	62	62	ZZ	99		A-1
7	7	7	63	63	AAA	100		100
8	8	8	64	64	BBB	101		101
9	9	9	65	65	65
10	10	10	66	66	66	124		124
11	11	11	67	67	67	125		125
12	12	12	68	68	68			
13	13	13	69	69	69			

Note: The above chart is typical of many cable system channel allocations. However the numbering system may differ in your area. If in doubt, consult your local cable company.

SELECTING THE ANTENNA INPUT


Your TV has two separate antenna inputs (ANT-1 and ANT-2) that allow you to connect two different signal sources, if desired.



ANT/VIDEO

USING THE ANT 1/2 BUTTON (on the Remote Control)

Each time you press the button, the ANT 1 mode and ANT 2 mode will alternate. The selected mode will be displayed in magenta to show which antenna source you are watching. Select the mode that matches the antenna terminal you use.

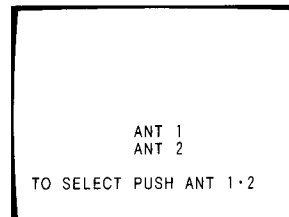

Note:


This button does not function in the VIDEO mode.

USING THE ANT/VIDEO BUTTON (on the TV)

Each time you press the button, the ANT 1 VIDEO 1, VIDEO 2, VIDEO 3 or ANT 2 mode will be selected in order.


The selected mode will be displayed in magenta to show which signal source you are watching.

Press the button until "ANT 1" or "ANT 2" is displayed in magenta to match the antenna terminal you use.

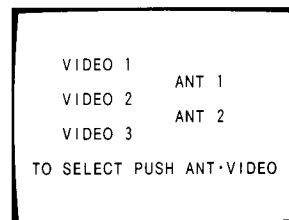

Note:

This button functions as the ADV button while any of four menu displays (PICTURE, AUDIO, SET UP or OPTION) are on the screen.


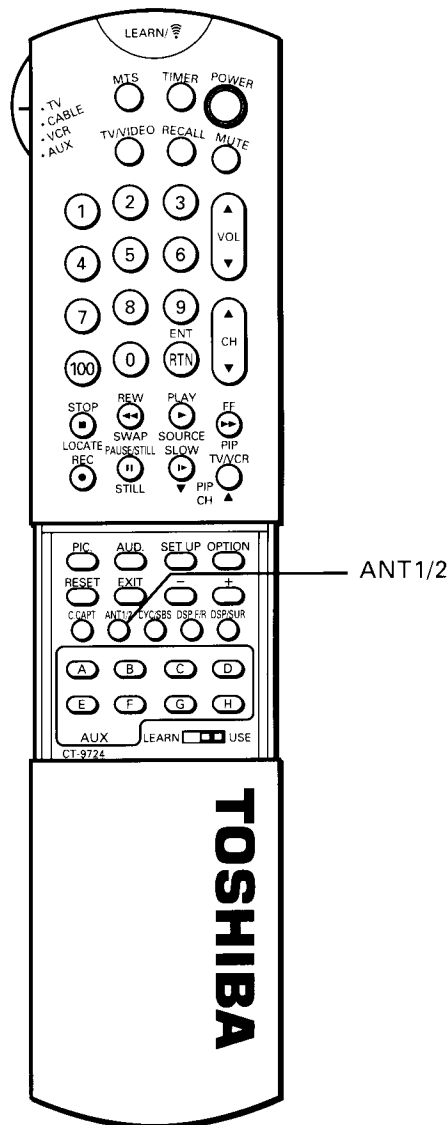


ANT1/2

PROGRAMMING CHANNEL MEMORY



The channel memory is the list of TV channel numbers your TV will stop on when you press the CHANNEL ▲ or ▼ button. **First, use the TV CABLE and CHANNEL PROGRAM functions to preset all active channels in your area automatically.** If necessary, arrange the preset channels with the ADD/ERASE functions so that you can tune into only desired channels.

Note: If you utilize both "ANT-1" and "ANT-2" terminals, perform programming channels for each input source.

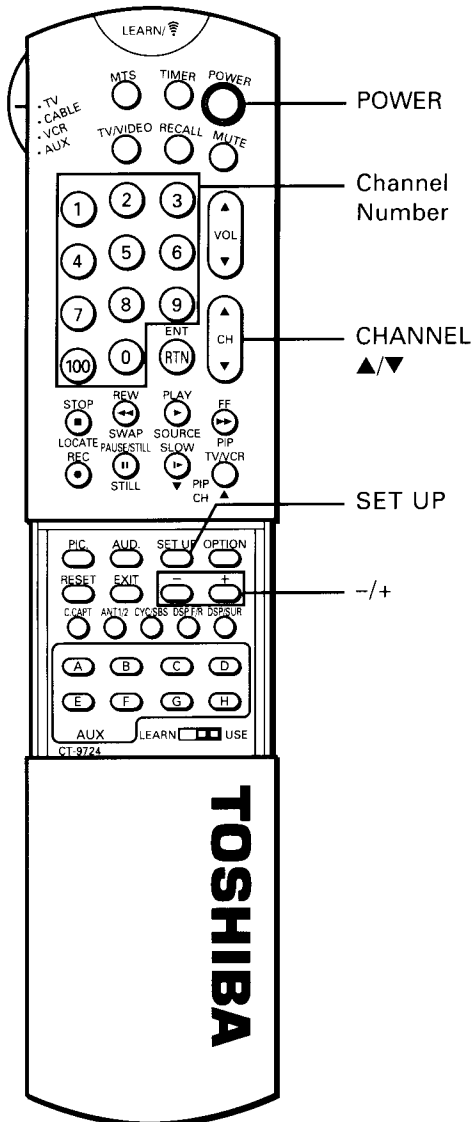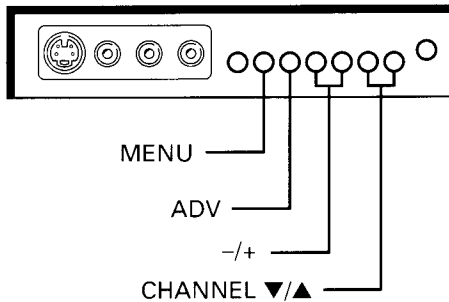




TV/CABLE FUNCTION

- 1 Press **POWER** to turn on the TV.
- 2 Press **SET UP** on the Remote Control (or **MENU** on the TV) to display the SET UP menu on the screen.
- 3 Press **SET UP** repeatedly (or **ADV** on the TV) until "TV/CABLE" is displayed in magenta.
- 4 Press - or + until the mode that corresponds to your TV signal system is displayed in magenta. Each time you press the button, the TV, STD CABLE, HRC CABLE or IRC CABLE mode will be selected in order.

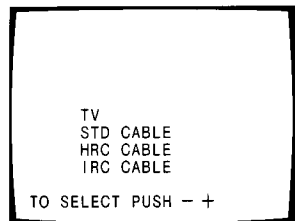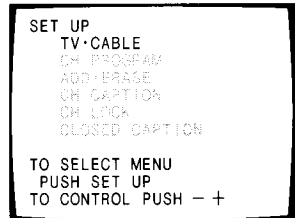


CH PROGRAM FUNCTION

- 1 Select "CH PROGRAM" following steps 2 and 3 above.
- 2 Press - or + to start channel programming. The TV will automatically cycle through all the TV or CABLE channels on the mode selected by the TV/CABLE function and store active channels in the channel memory.
- 3 When channel programming is complete, you will see the message at the right.
- 4 Press **CHANNEL ▲** or **▼** to make sure the channel programming has been done properly.

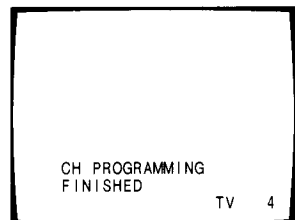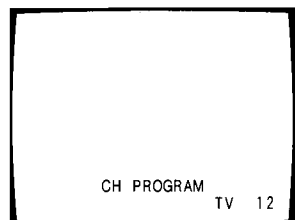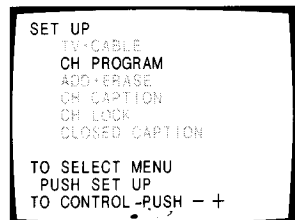


PROGRAMMING CHANNEL MEMORY (Continued)

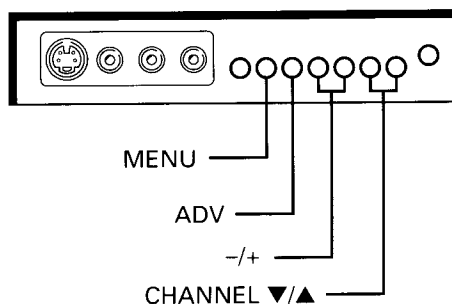


ADD ERASE FUNCTION

First follow the instructions "CH PROGRAM FUNCTION" and then add or erase individual channels as desired.


- 1 Select the channel you want to erase using the **CHANNEL ▲** or **▼** button, or select the channel you want to add using the **Channel Number** buttons.

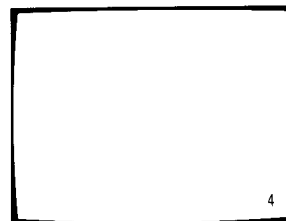

- 2 Press **SET UP** on the Remote Control (or **MENU** on the TV) to display the SET UP menu on the screen.

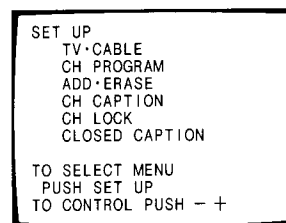


- 3 Press **SET UP** repeatedly or **ADV** on the TV until "ADD/ERASE" is displayed in magenta.

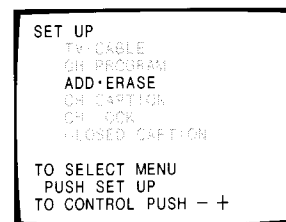

- 4 Press **-** or **+**:
 - To erase the channel**


Press the button until "CH ERASE" is displayed in magenta indicating that the channel has been erased from the memory.
 - To add the channel**

Press the button until "CH ADD" is displayed in magenta indicating that the channel has been memorized.

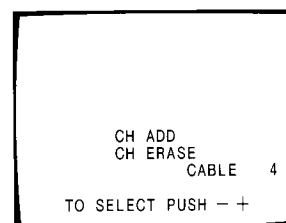


- 5 Repeat steps 1 to 4 for other channels.

You have now completed the channel programming.

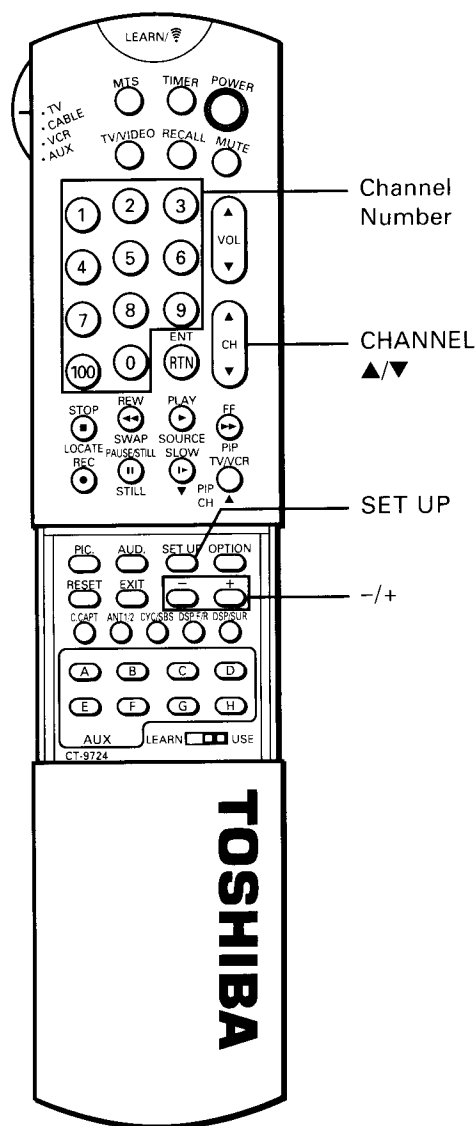


WATCHING TV PROGRAMS

- First set the TV/CABLE/VCR/AUX switch to "TV" position.

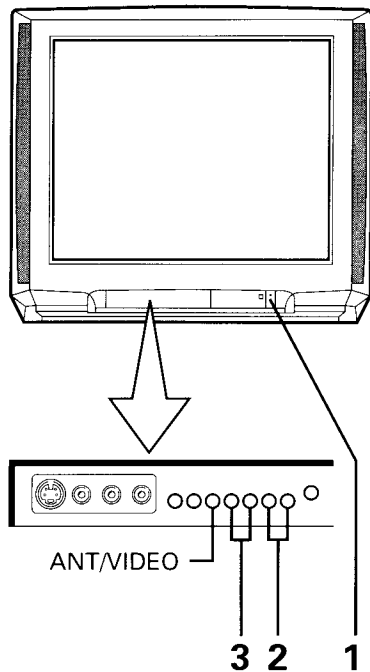

- 1 Press **POWER** to turn on the TV.
The following on-screen information will be displayed for a few seconds.

- Antenna mode (when in TV mode).
- Channel number or VIDEO mode selected.
- Channel caption (if previously preset).
- Stereo or SAP audio status.

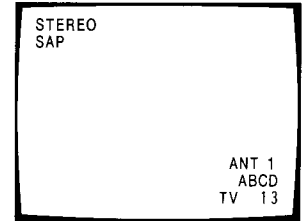

To turn off the TV, press **POWER** again.



- 2 Select a channel in one of the following two ways.
 - **To scan the memorized channels in numerical sequence**
Press **CHANNEL ▲** to select the next higher channel.
Press **CHANNEL ▼** to select the next lower channel.
Press the button again to select the next memorized channels.

- **To select a channel directly**
Press the **Channel Number** buttons (0-9 and 100).
To select channel 4, press "4" (or press "0", "4").
To select channel 38, press "3", "8".
To select channel 125, press "100", "2", "5" in sequence.

If you cannot select certain channels, either TV (off the air) or CABLE channels

Check if the TV/CABLE function is properly set. See page 24.

- 3 Press **VOLUME ▲/▼** to adjust the volume.
To increase the volume, press **▲**.
To decrease the volume, press **▼**.

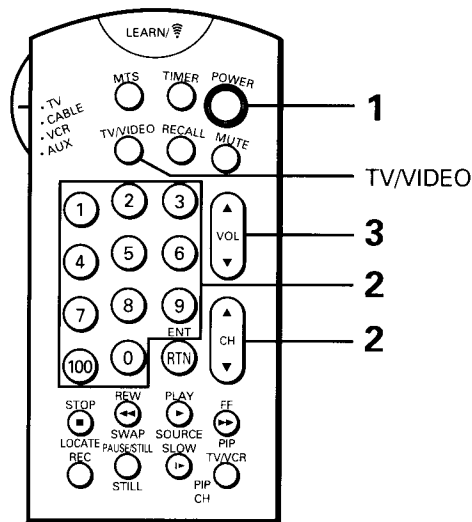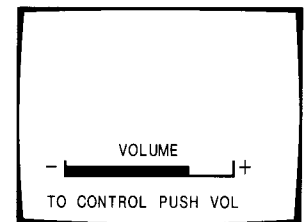

Note:

The **VOLUME ▲/▼** buttons on the TV function as the menu +/- buttons while any of the menu displays (PICTURE, AUDIO, SET UP or OPTION) are on the screen.

Watching Video Input

The TV/VIDEO button (or ANT/VIDEO button) is used to view the signals coming from other devices like VCR's or Video Disc Players connected to this TV. Details are on page 48.


Auto-Power-Off

If a vacant channel is tuned or TV broadcast for a day is finished, the TV will automatically turn off after about 15 minutes.
This feature does not operate in the VIDEO mode.

Last Mode Memory

If the power is cut off while you are viewing the TV and the power is resupplied, the TV is turned on automatically by the **Last Mode Memory** feature. If the power is going to be off or when you leave home for a long time, remove the power plug from the wall outlet to prevent the TV from turning on in your absence.


CONVENIENT REMOTE FUNCTIONS

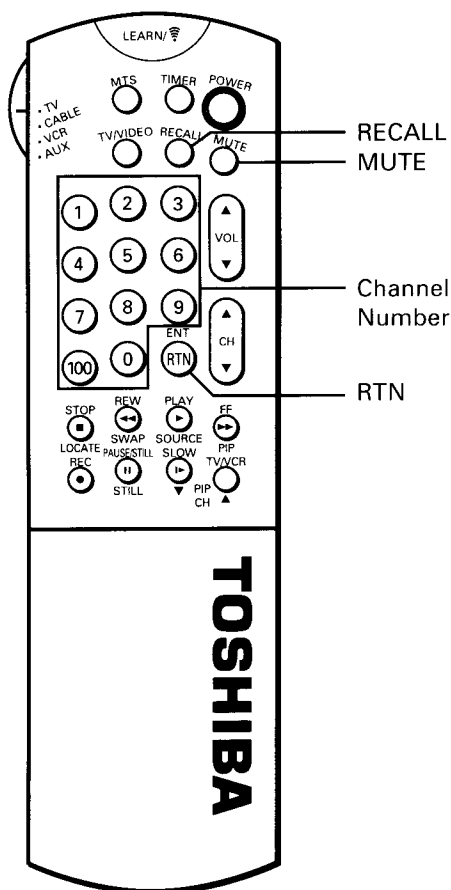

TO DISPLAY ON-SCREEN INFORMATION

Press **RECALL** to display the following on-screen information.


- Antenna mode (when in TV mode)
- Channel number or VIDEO mode selected.
- Channel caption (if previously preset).
- Time (if clock has been set).
- Closed Caption or Text program status.
- Stereo or SAP audio status.

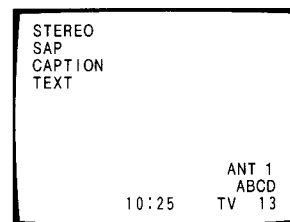

TO MUTE THE SOUND

Press **MUTE** to mute the sound immediately without affecting the picture. The word "MUTE" will be displayed on the screen as shown. This is useful during telephone calls or other interruptions.

To restore the sound, press **MUTE** again.

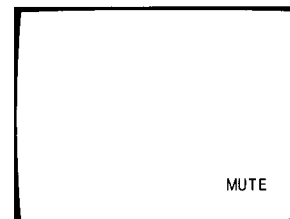


TO CHANGE QUICKLY BETWEEN TWO CHANNELS

Press **RTN** to return to the last channel that was tuned previously. This is useful should you want to view two channels. This allows you to view two programs without entering an actual channel number each time.


To operate this function

- 1 Select the first channel you want to view.
- 2 Select the other channel with the **Channel Number** buttons.
- 3 Press **RTN**.
The previous channel will return.

Each time you press **RTN**, the TV will switch back and forth between the two channels.

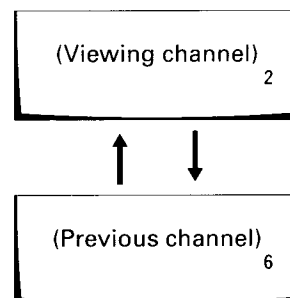


ADJUSTING THE PICTURE

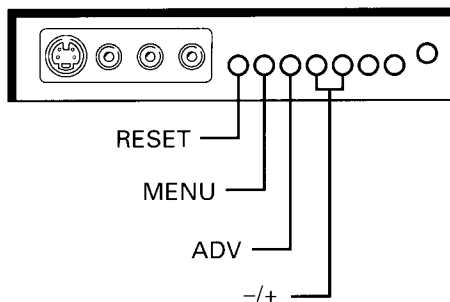


TO ADJUST THE PICTURE QUALITY

You can adjust the picture quality (CONTRAST, BRIGHTNESS, COLOR, TINT and SHARPNESS) to suit your personal preference.

- 1 Press **PIC** on the Remote Control (or **MENU** on the TV) to display the PICTURE menu.
- 2 Press **PIC** (or **ADV** on the TV) until the item you want to adjust is displayed in magenta.
- 3 Press **-** or **+** to adjust the level.

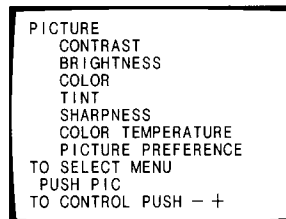

Example: CONTRAST adjustment mode display

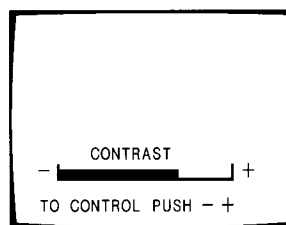


Press **PIC** or **MENU** (while the bar display remains on the screen). The new setting will appear in the PICTURE menu.

Item	Pressing	
	-	+
CONTRAST	lower	higher
BRIGHTNESS	darker	lighter
COLOR	paler	deeper
TINT	reddish	greenish
SHARPNESS	softer	sharper

The above five PICTURE items you have adjusted will be stored in the MEMORY of the PICTURE PREFERENCE function. (See page 29.)

To reset the picture adjustments


Press **RESET**. (See page 30 for details.)

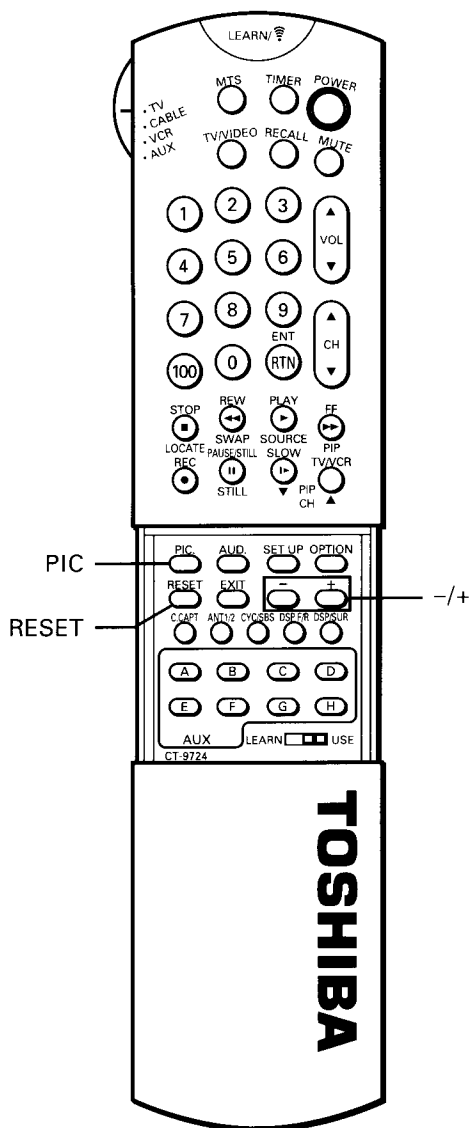


TO SELECT THE COLOR TEMPERATURE

These selections are the difference between the blue and red tones on the picture.

- 1 Select "COLOR TEMPERATURE" following the steps 1 and 2 on the previous page.

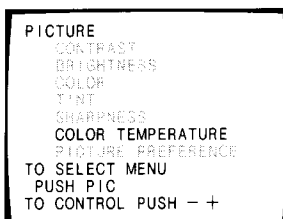


- 2 Press - or + until your desired mode is displayed in magenta. Choose between flesh tones that are WARM, MEDIUM and COOL in order.

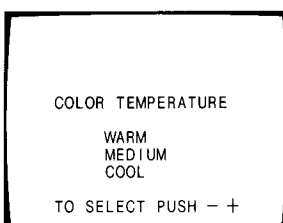


TO SELECT THE PICTURE PREFERENCE FUNCTION

You can select a desired picture tone from three picture preset modes (NORMAL, THEATER, MEMORY) instantly.

- 1 Select "PICTURE PREFERENCE" following the steps 1 and 2 on the previous page.

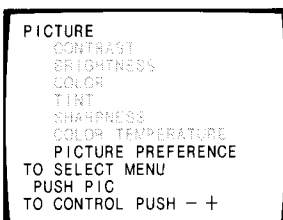

- 2 Press - or + until your desired mode is displayed in magenta.

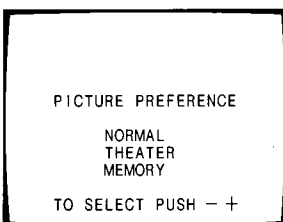


Mode	Picture quality
NORMAL	The picture quality preset at the factory
THEATER	Soft and moody picture
MEMORY	The picture quality you set(First follow page 28.)

Note: Pressing the RESET button resets the picture quality of the MEMORY mode to the factory-preset level.

ADJUSTING THE SOUND



You can adjust the AUDIO functions (BASS, TREBLE and BALANCE) to suit your personal preference.

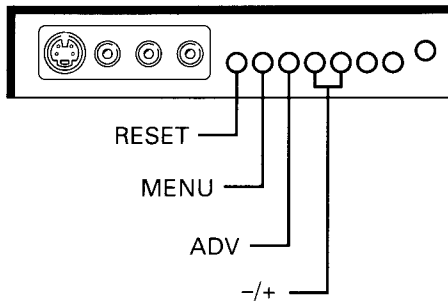

TO ADJUST THE SOUND QUALITY


- 1 Press **AUD** on the Remote Control (or **MENU** on the TV) to display the AUDIO menu on the screen.
- 2 Press **AUD** (or **ADV** on the TV) until the item you want to adjust is displayed in magenta.
- 3 Press **-** or **+** to adjust the level.

Example: BASS adjustment mode display

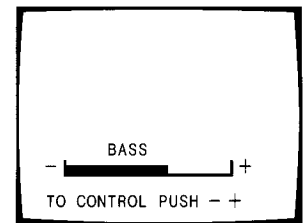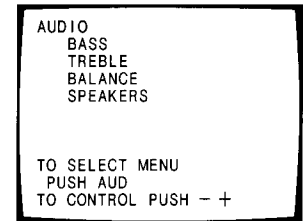

Press **AUD** or **MENU** (while the bar display remains on the screen). The new setting will appear in the AUDIO menu.


Item	Pressing	
	-	+
BASS	weaker	stronger
TREBLE	weaker	stronger
BALANCE	decreases the right channel	decreases the left channel

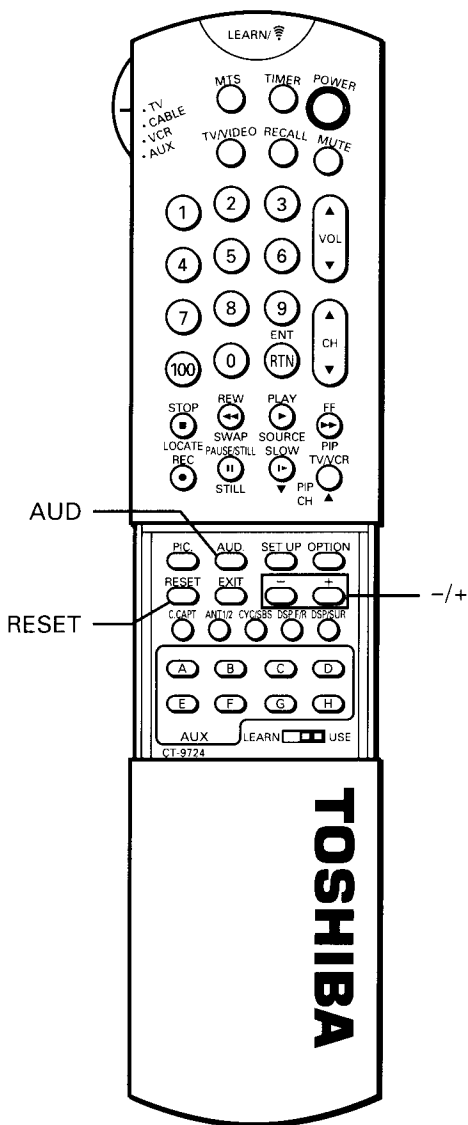

RESET BUTTON

To reset the **PICTURE** and **AUDIO** adjustments to the factory-preset level Press **RESET**.

You will see the display at the right (maximum CONTRAST and all other adjustments centered).

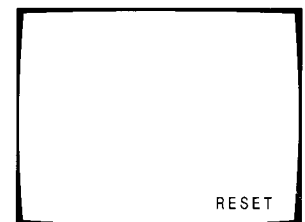

The **RESET** button also performs the following adjustments.


- COLOR TEMPERATURE..... COOL
- NOISE REDUCTION.....OFF
- PICTURE PREFERENCE.....NORMAL
- PIP CONTRAST.....Maximum setting

Note:

The "SPEAKERS" function is explained on page 52.


SELECTING STEREO/SAP BROADCASTS

The MTS (Multi-channel TV Sound) feature allows you to improve your TV viewing with high fidelity stereo sound. MTS also provides for an extra channel, SAP (Second Audio Program), used to transmit a second language or other audio information.

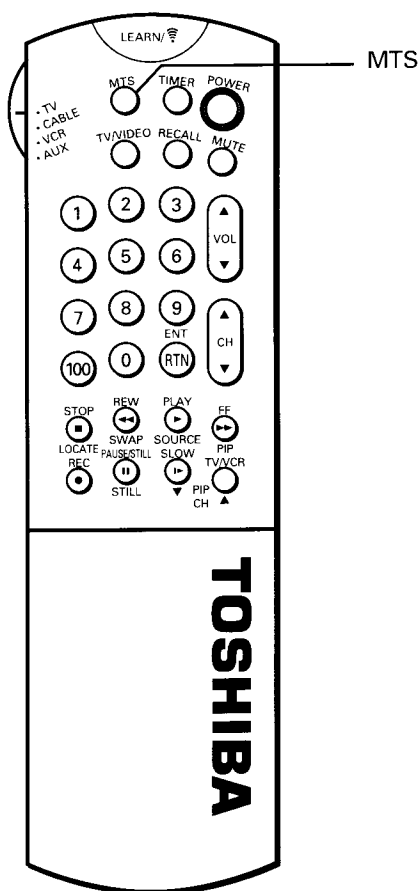


LISTENING TO STEREO SOUND

- 1 When the TV receives a stereo broadcast, the word "STEREO" is displayed on the screen whenever the TV is turned on, a channel is selected, or the RECALL button is pressed.

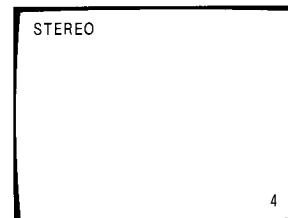


- 2 Press **MTS** until "STEREO" is displayed on the screen in magenta. The usable selections are displayed in yellow.

Normally this function can be left in the STEREO mode. Your TV will then automatically reproduce either stereo or monaural sound, whichever is broadcast.

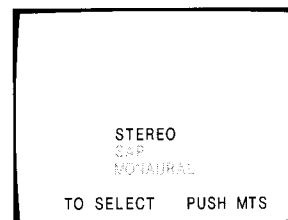


LISTENING TO SECOND LANGUAGE

- 1 When the TV receives a SAP broadcast, the word "SAP" is displayed on the screen.

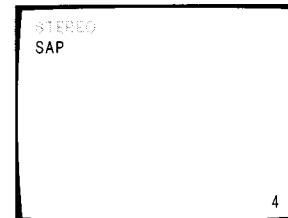

- 2 Press **MTS** until "SAP" is displayed in magenta. You will hear only the second language from the left and right speakers.

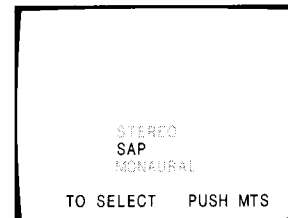

If the stereo sound is noisy


If a broadcast signal is not strong enough, and noise-free stereo sound is not available, select the MONAURAL mode. The noise should be reduced.

Notes:

- Be sure you have selected the STEREO mode if broadcast is in stereo.
- If the "STEREO" (or "SAP") is not displayed in spite of a known MTS broadcast, select the STEREO or SAP mode by pressing the MTS button again.
- The MTS button will not function in the VIDEO mode.

ENHANCING THE SURROUND SOUND EFFECT

With Toshiba's Digital Sound Processor (DSP) with Dolby Surround, the TV can simulate various surroundings. You can select the appropriate mode for the scene of TV program you are watching from among the five modes shown below.


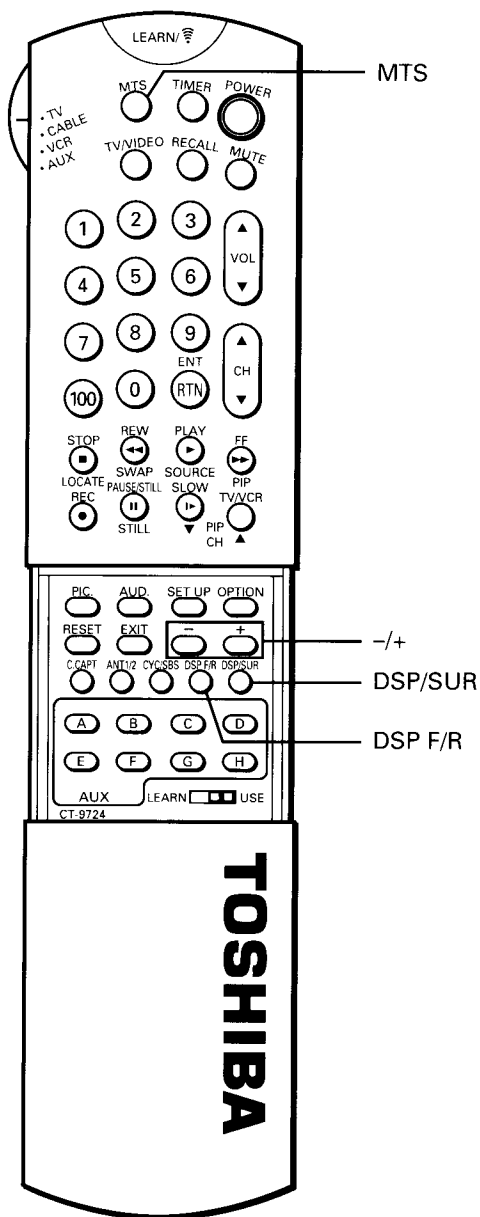


TO SELECT THE APPROPRIATE SURROUND MODE


Mode	Surround effect
DOLBY SURROUND	For playback of programs recorded with Dolby Surround*
THEATER	A movie theater filled with a rich warm sound
STADIUM	A large football or baseball stadium for a live game
NIGHT CLUB	A nightclub room
CONCERT HALL	A concert hall having about 1500 seats

- 1 Press **MTS** to select STEREO mode.
- 2 Press **DSP/SUR** on the Remote Control to call up the DSP mode display.
- 3 Press **DSP/SUR** repeatedly until your desired mode is displayed in magenta.

Example: To select THEATER mode

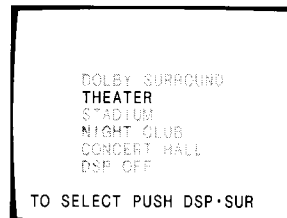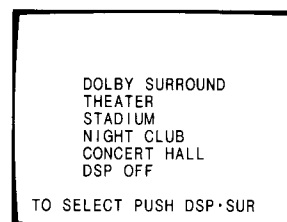




- 4 **To adjust the DSP level**
Press **DSP F/R** while the DSP mode display is on the screen to select either the FRONT or REAR speakers to be adjusted in magenta.
The FRONT and REAR speakers can be adjusted separately.
FRONT mode – To adjust the internal speakers or connected external speakers.
REAR mode – To adjust the Surround Speakers connected to the REAR SPEAKER terminals.

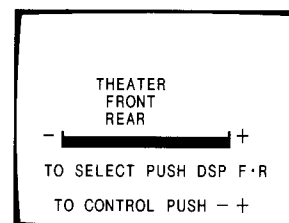

Note:

The DSP function processes only stereo signals input from a TV broadcast or video.


- 5 Press **-** or **+** to adjust the DSP level.

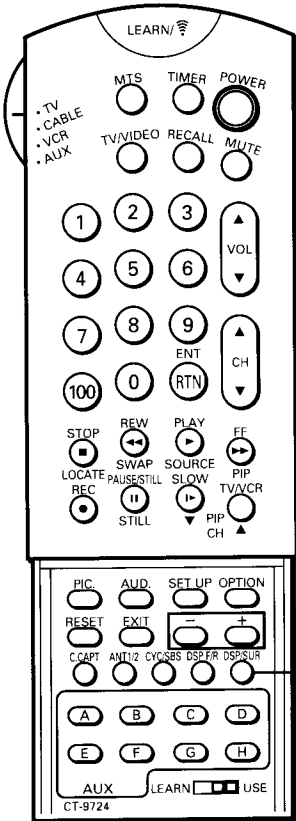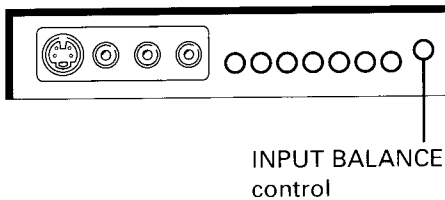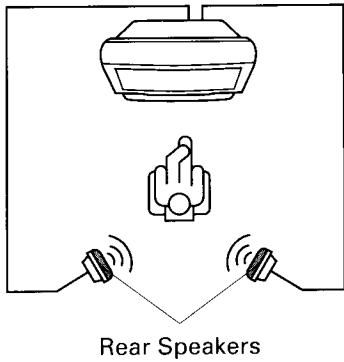

TO ADJUST THE INPUT BALANCE CONTROL

When you enjoy a Dolby Surround program, if direct speech is heard from the connected Surround Speakers, adjust the INPUT BALANCE control to cancel it.

 
- 1 Set the MAIN SPEAKER switch on the TV rear panel to the "EXT" position to disconnect the main speakers.




Note:

If you are using the external speakers, disconnect both (L and R) positive leads temporarily. See page 53 for details.

- 2 Press **DSP/SUR** on the Remote Control to call up the DSP mode display.

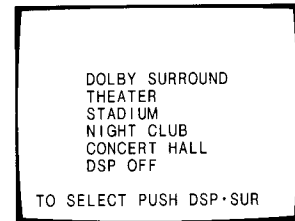

- 3 Press **DSP/SUR** repeatedly to select "DOLBY SURROUND".

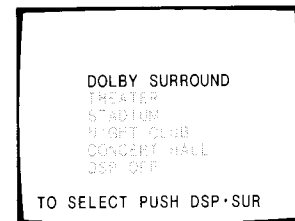

- 4 Adjust the **INPUT BALANCE** control to minimize the dialogue sound from the Rear Speakers.



 
To deactivate the DSP function

Select "DSP OFF" in the DSP mode display.

Note:

The DOLBY SURROUND level adjustment is only for the Rear Speakers.


*Dolby Surround

Manufactured under license from Dolby Laboratories Licensing Corporation. Additionally licensed under one or more of the following patents: U.S. number 3,959,590; Canadian numbers 1,004,603 and 1,037,877. "Dolby" and the double-D symbol  are trademarks of Dolby Laboratories Licensing Corporation.


Toshiba's CYCLONE™ ABX is a deep bass reproduction system.



 - 1 Press **CYC/SBS** on the Remote Control to call up the CYCLONE ON/OFF mode display.



 
Press **-** or **+** while the CYCLONE ON/OFF mode display shown above is on the screen to call up the CYCLONE volume adjustment display.



To deactivate the CYCLONE woofer

Select "CYCLONE OFF" in the CYCLONE ON/OFF mode display.

SETTING THE OFF TIMER AND THE CLOCK

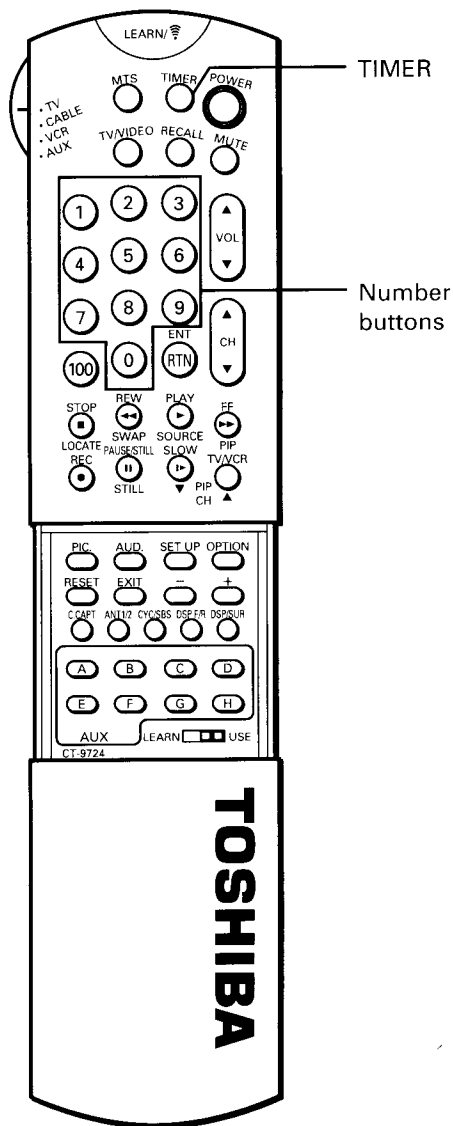

TO SET THE OFF (SLEEP) TIMER


With the OFF timer, you can set the TV to turn off automatically after a pre-determined period of time (every 10 minutes, up to 180 minutes = 3 hours).

1 Press **TIMER** to select the TIMER mode.

2 Press two **Number** buttons to enter the length of time you want the TV to stay on after each number position starts to blink.

Example: 120 minutes
Press 1 and 2.

3 Press **TIMER** to start the timer.
The display color will change from magenta to cyan, and then the display will go off.

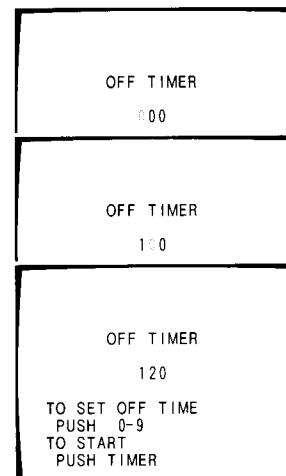

To cancel the setting

Press **POWER** twice, once to turn the TV off and once to turn it on again.

TO SET THE CLOCK


1 Press **TIMER** twice to select the CLOCK mode.

2 Press four **Number** buttons to enter the correct time, after each number position starts to blink.

Example: To set 10:25 p.m.
Press 1, 0, 2, and 5.

- The clock operates on a 12 hour-cycle.

3 Press **TIMER** to start the clock.
The display color will change from magenta to cyan, and then the display will go off.

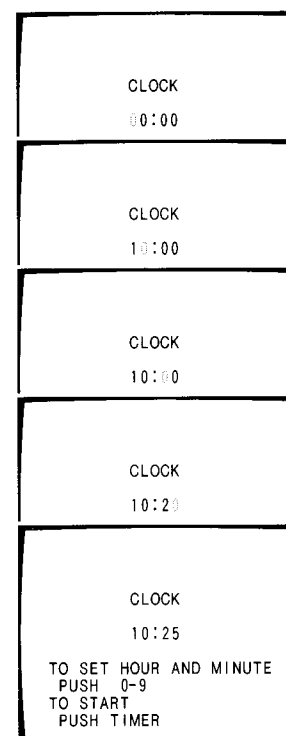

Note on the off-timer:

To display the time remaining, press **TIMER** **once**. The remaining time will be displayed on the screen. To erase the display, press **TIMER** **twice**.

Note on the clock:

If the power source for the TV is interrupted (i.e., AC cord unplugged or power failure), the clock will have to be reset. (The time display will show "00:00".)


To monitor the time

Press **RECALL**.

WATCHING PICTURE IN PICTURE (PIP)


This TV is capable of displaying two pictures simultaneously. This is called the Picture-in-Picture function. A TV broadcast picture, or a picture from external source equipment such as a VCR, can be displayed as a small picture.

Note: The signal sources from the ANT-2 terminal cannot be displayed as a small picture.

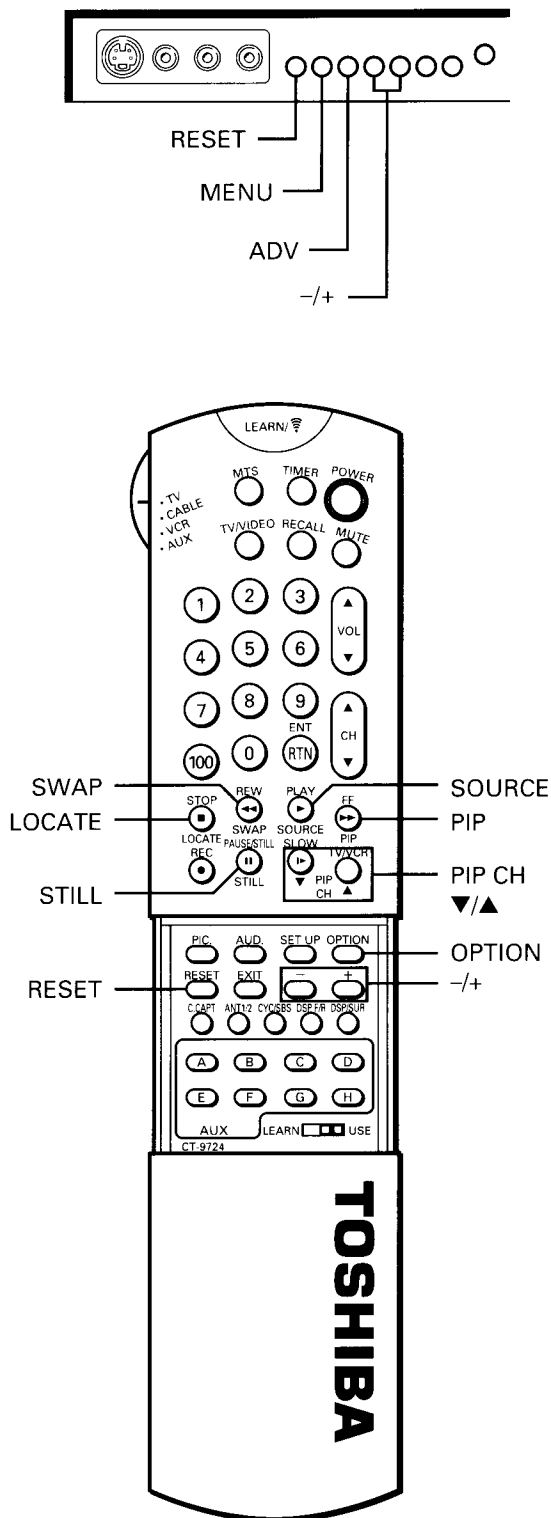

TO DISPLAY THE PIP

- 1 To open up the PIP window**
Press **PIP** once.
The 1/9 size picture will appear.

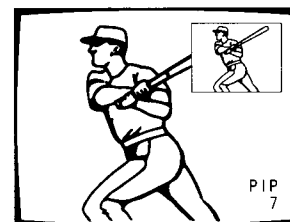

- 2 To change the window size**
Press **PIP** again.
The 1/16 size picture will appear.



- 3 To make the PIP window disappear**
Press **PIP** again.

Each time you press **PIP**, above 1, 2 or 3 will be selected cyclically.


TO CHANGE TV CHANNELS IN PIP

Press **PIP CH** ▼/▲ to select the desired program for the small picture.
Press "▲" to select the next higher channel in channel memory.
Press "▼" to select the next lower channel in channel memory.

TO DISPLAY A PICTURE FROM AN EXTERNAL SOURCE


Connect the other source (VCR, camcorder, etc.), to one of the VIDEO inputs.

Press **SOURCE** repeatedly to select input source.
The selected mode will be displayed in magenta.
Select "VIDEO 1", "VIDEO 2" or "VIDEO 3".

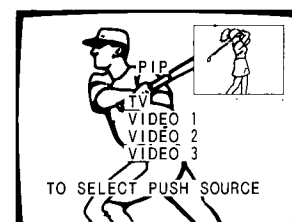


TO CHANGE THE POSITION OF THE PIP

Press **LOCATE** to move the PIP to the next corner.

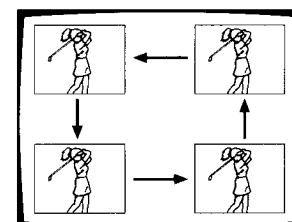

TO FREEZE THE SMALL PICTURE


Press **STILL** once while the PIP is on the screen to freeze the PIP picture.
To return to an action picture, press **STILL** again.

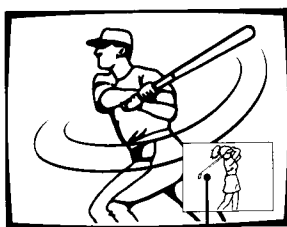

Still picture


TO SWITCH THE MAIN AND SMALL PICTURE

Press **SWAP** once to switch the PIP picture with the main picture

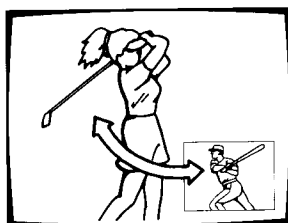


ADJUSTING PIP CONTRAST

- 1 Press **PIP** to display the PIP.

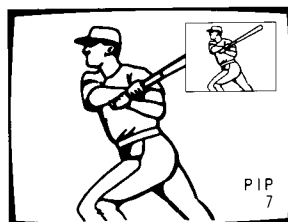


- 2 Press **OPTION** on the Remote Control (or **MENU** on the TV) to display the OPTION menu on the screen.

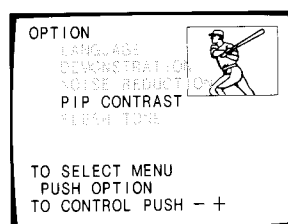

- 3 Press **OPTION** repeatedly (or **ADV** on the TV) until "PIP CONTRAST" is displayed in magenta.

- 4 Press **-** or **+** to call up the PIP CONTRAST adjustment mode display on the screen.

Press **+** to increase contrast.
Press **-** to decrease contrast.
Press and hold either button until your desired contrast is obtained.

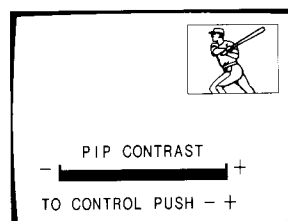


Note: If the RESET button is pressed, the PIP contrast will be reset to the maximum (factory-preset level).

CAPTIONING CHANNELS


TO CAPTION CHANNELS

- 1 Select the channel you want to caption.

Example: To assign "ABCD" to channel 4.

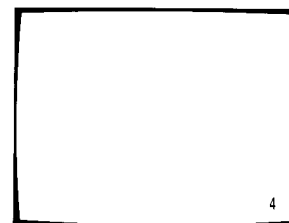


- 2 Press **SETUP** on the Remote Control to display the SET UP menu on the screen.

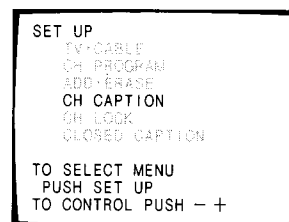


- 3 Press **SETUP** repeatedly until "CH CAPTION" is displayed in magenta.

- 4 Press - or + to call up the caption setting mode display shown below on the screen.

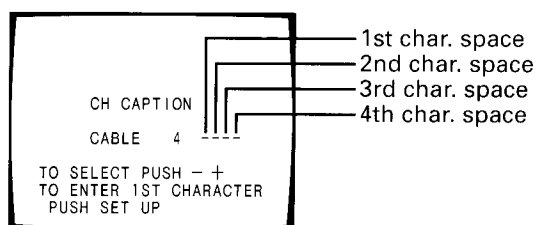


Letters of alphabet, numbers and other graphic symbols are available for captioning.

Each time you press the - or + button, the character to be displayed will change in the following order.

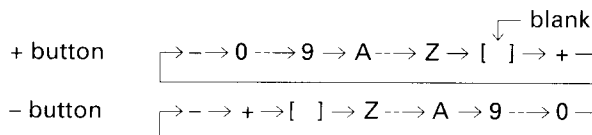


- 5 Press - or + to put a character "A" in the 1st character space.


Press the button until the character you want appears on the screen.

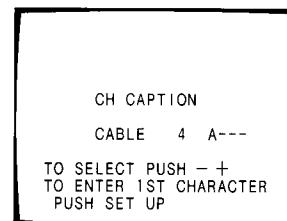


- 6 Press **SETUP** once to enter the 1st character and to advance to the next character space.

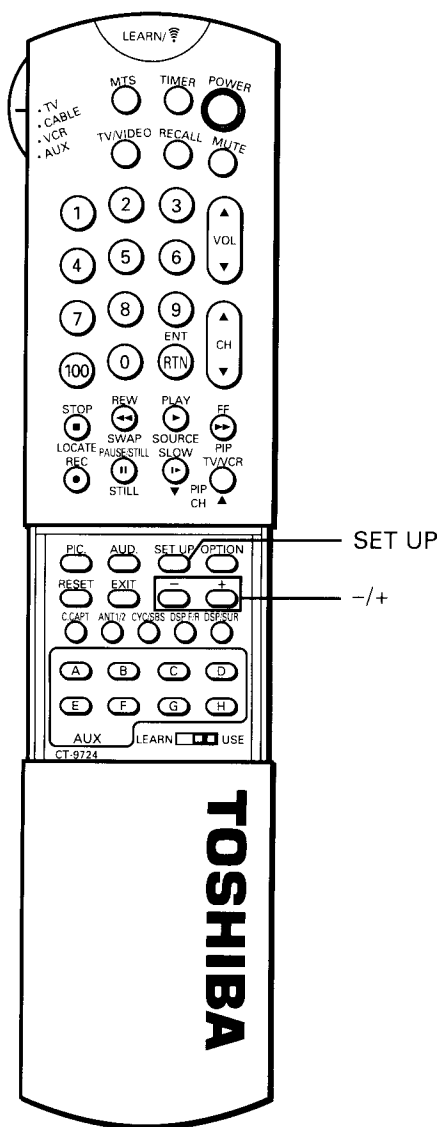

- 7** Repeat steps 5 and 6 to enter the 2nd, 3rd and 4th characters "B", "C", "D". When the on-screen message at the right appears, the channel caption has been stored in the memory.

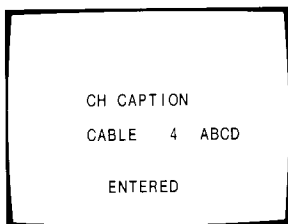

- 8** Repeat steps 1 through 7 for other channels. You can caption up to 32 channels. The caption will appear when you turn the TV on, select a channel, or press the RECALL button.

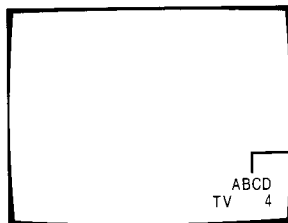


Channel
caption

TO CLEAR YOUR CAPTIONING

- 1** Select the channel which has the caption you want to erase.
- 2** Call up the channel caption setting mode display following steps 2 to 4 in the previous page.
- 3** Enter "[blank]" or "-" in all character spaces.

LOCKING CHANNELS


With this function you can lock out specific channels (for example a channel that you do not want your children to watch) by entering your own 4-digit code. The TV will not be able to tune them for the next 24 hours, unless you cancel the locked out channels. This TV has 4 memory spaces total for the TV mode and CABLE mode respectively.

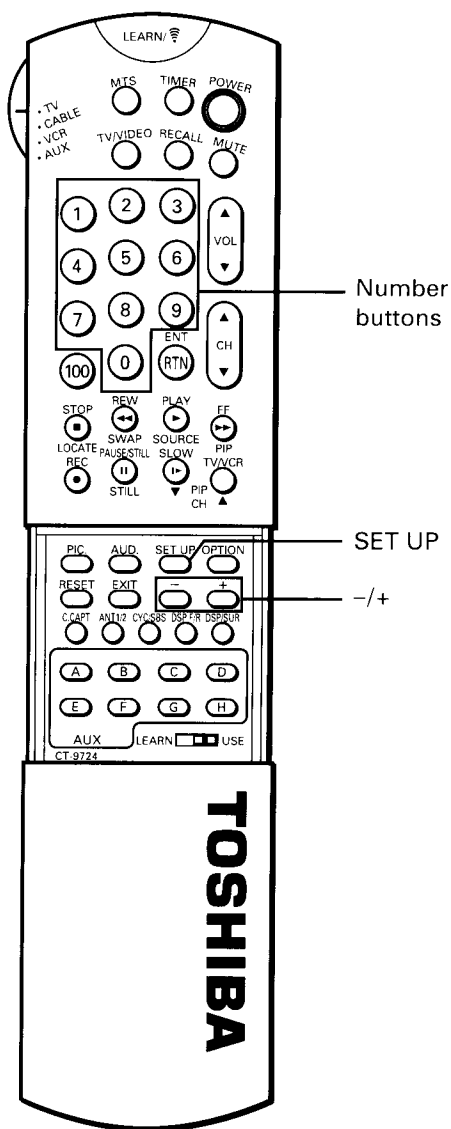


TO LOCK OUT CHANNELS

- 1 Select a channel you want to lock out.

Example: channel 4

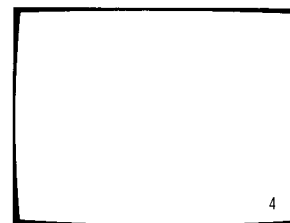


- 2 Press **SETUP** on the Remote Control to display the SET UP menu on the screen.

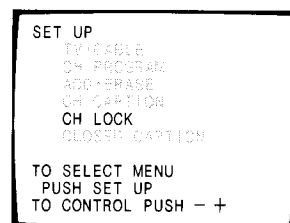

- 3 Press **SETUP** repeatedly until "CH LOCK" is displayed in magenta.

- 4 Press - or + to call up the channel lock adjustment mode display shown below. Each time you press the button, "SET" and "CLEAR" alternate. Select "SET".

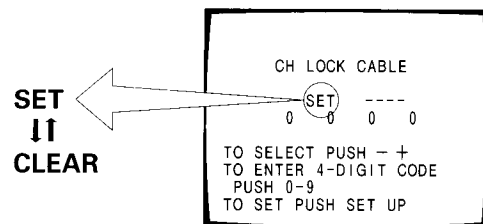


- 5 Press **Number** buttons (0 - 9) to enter a 4-digit code. The numbers you enter will replace the dashes in the display. **Pick a number that is easy to remember.**


Example: To enter "1234".

Press 1, 2, 3, and 4 in order.

1 ----> 12 ----> 123 ----> 1234

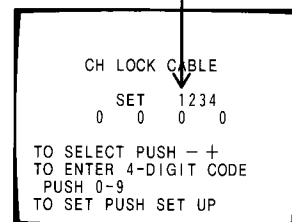

- 6** Press **SETUP** to lock out the channel.
The display at the right will appear on the screen for about 4 seconds.

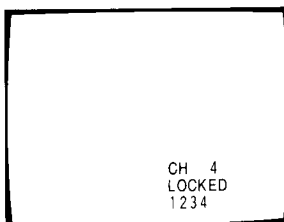


- 7** Repeat steps 1 to 5 for other channels.
This TV has 4 memory spaces total for the TV mode and CABLE mode respectively.

Note: If a different code number is used whenever you lock out a channel, the last one has priority over the preceding ones.

- 8** Select another channel, or turn off the TV if desired.


TO RESTORE CHANNELS

- 1** Select "CLEAR" following the steps 2 to 4 in the previous page.

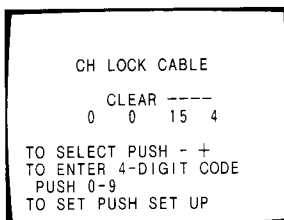


- 2** Press the 4-digit code used to lock out the channels with the **Number** buttons.

- 3** Press **SETUP**.
If you have entered the correct code
The display shown at the right appears.

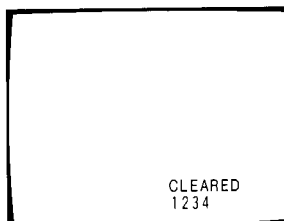

If a wrong code has been entered



 
These messages appear. Try to enter the correct code again.



If you want to know the channels you have locked out

Call up the channel lock adjustment mode using the **SETUP** button and **-/+** buttons.


OPERATING CLOSED CAPTIONING FEATURE

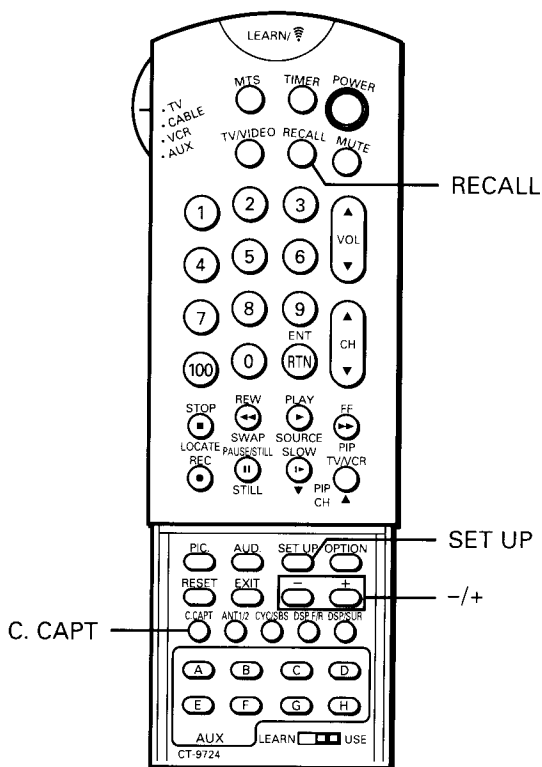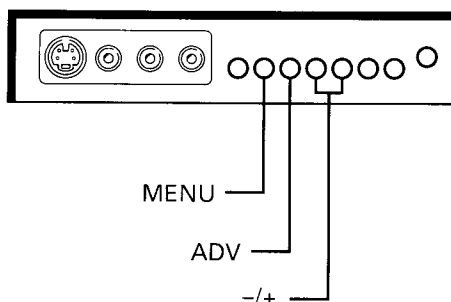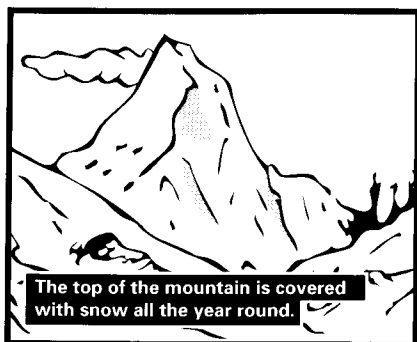

TO VIEW CAPTIONS


Closed captioning is a printed version of the dialogue, narration, and/or sound effects of a TV program. Captions will appear at either the top or bottom of the screen during captioned broadcasts as shown. Captioning is especially helpful for hearing impaired individuals.

- 1 Select the desired program.
- 2 Press **RECALL** to check if the program is being captioned. If it is, the word "CAPTION" is displayed on the screen. The captioned programs are usually notated on your local TV listings by its service marks such as "CC".

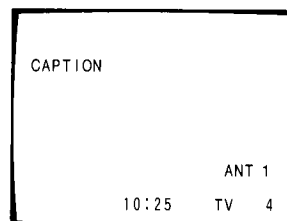



- 3 Press **C.CAPT** on the Remote Control to call up the closed caption mode display. Usable selections are displayed in yellow.

Press **C.CAPT** repeatedly until "CAPTION 1" or "CAPTION2" is displayed in magenta. The CAPTION 2 mode may be utilized for alternate languages if they are being transmitted.

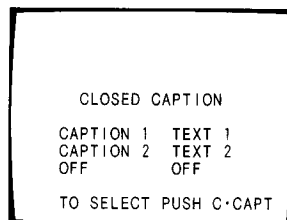

You can also select this feature using the on-screen menu function.

- 1 Press **SET UP** on the Remote Control (or **MENU** on the TV) to display the SET UP menu on the screen.
- 2 Press **SETUP** repeatedly (or **ADV** on the TV) until "CLOSED CAPTION" is displayed in magenta.
- 3 Press **-** or **+** to select "CAPTION 1" or "CAPTION 2".

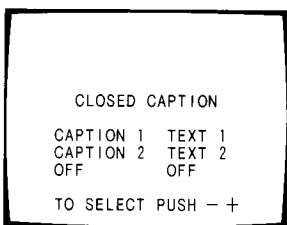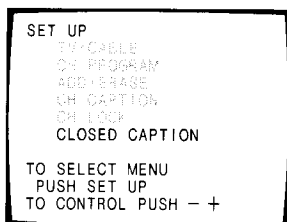

To deactivate this feature

Select "OFF" in the closed caption mode display.


Note:

- A closed-captioned signal may not be decoded in the following situations.
- When a video tape has been dubbed.
 - When the signal reception is weak.
 - When the signal reception is non-standard.

TO VIEW TEXT


Text is information that is presented using from one half to full television screen. It is usually not related to the program. For example, it could be a listing of the closed-captioned programs, news, weather information or stock market reports.

- 1 Select the desired program.
- 2 Press **RECALL** to check if the program includes TEXT information. If it does, the word "TEXT" is displayed on the screen.

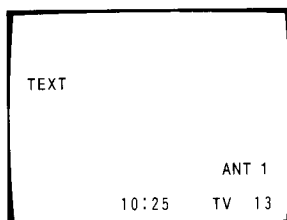



- 3 Press **C.CAPT** on the Remote Control to call up the closed caption select mode display. Usable selections are displayed in yellow.

Press **C.CAPT** repeatedly until "TEXT 1" or "TEXT 2" is displayed in magenta.

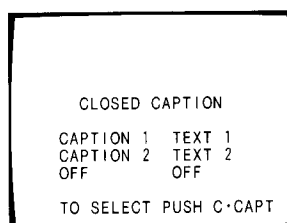

You can also select this feature using the on-screen menu function.

- 1 Press **SET UP** on the Remote Control (or **MENU** on the TV) to display the SET UP menu on the screen.
- 2 Press **SET UP** repeatedly (or **ADV** on the TV) until "CLOSED CAPTION" is displayed in magenta.
- 3 Press **-** or **+** to select "TEXT 1" or "TEXT 2".

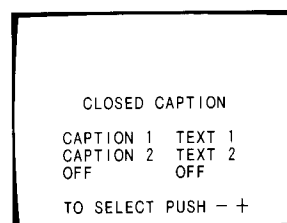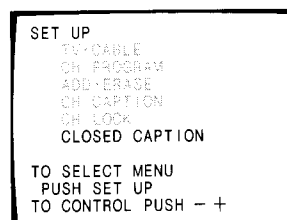


To deactivate this feature

Select "OFF" in the closed caption mode display.


Note:

If you select a Caption format channel and the "TEXT" mode, the TEXT screen will always be displayed. However, if TEXT character signals are not transmitted, the characters are not displayed.

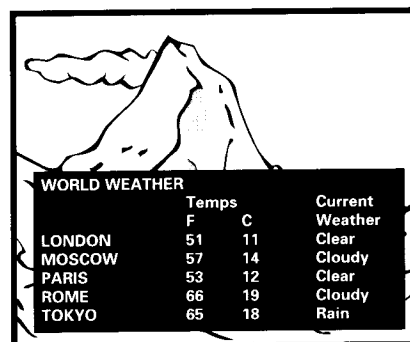




CHANGING ON-SCREEN DISPLAY LANGUAGE

Three different languages (ENGLISH, FRENCH and SPANISH) are available for the on-screen displays (adjustment menus, and messages), and you can choose the desired one.

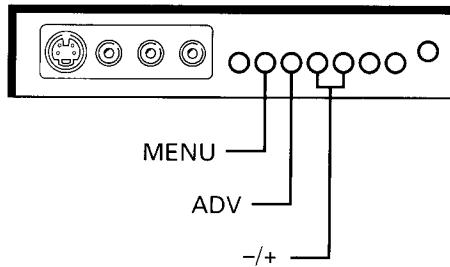


TO SELECT A LANGUAGE

- 1 Press **OPTION** on the Remote Control (or **MENU** on the TV) to display the **OPTION** menu on the screen.
- 2 Press **OPTION** repeatedly or (or **ADV** on the TV) until "LANGUAGE" is displayed in magenta.
- 3 Press **-** or **+** until your desired language is displayed in magenta.

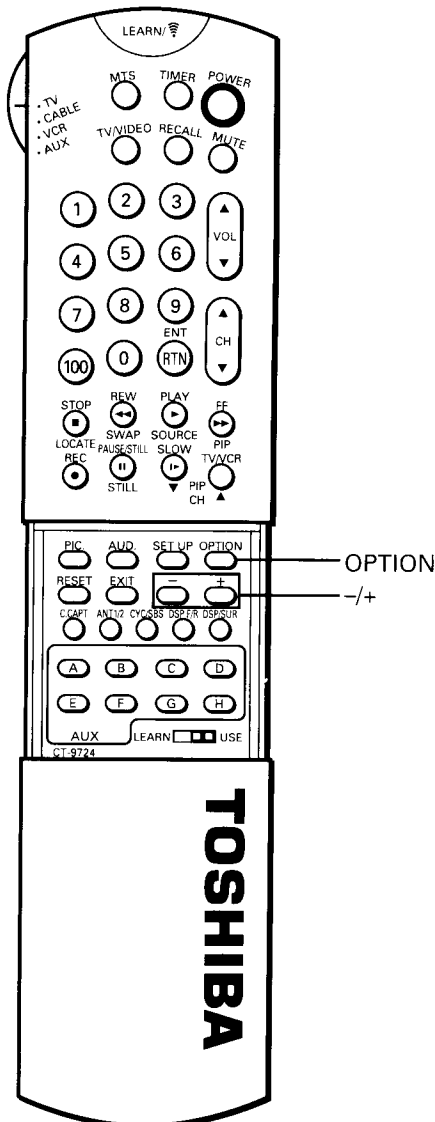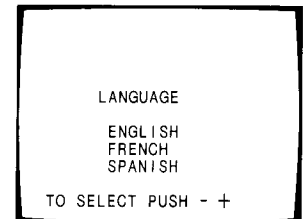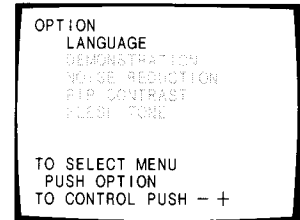


Example: Picture menu display


"ENGLISH"

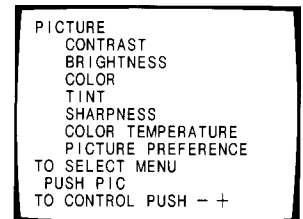

"FRENCH"


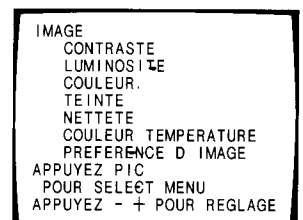


"SPANISH"

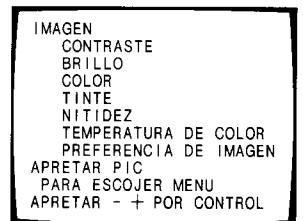




ACTIVATING ON-SCREEN DEMONSTRATION

When this function is activated, your TV will automatically display a variety of its on-screen menus and special features. This function is provided for demonstration purpose only. You may not need to use this function.

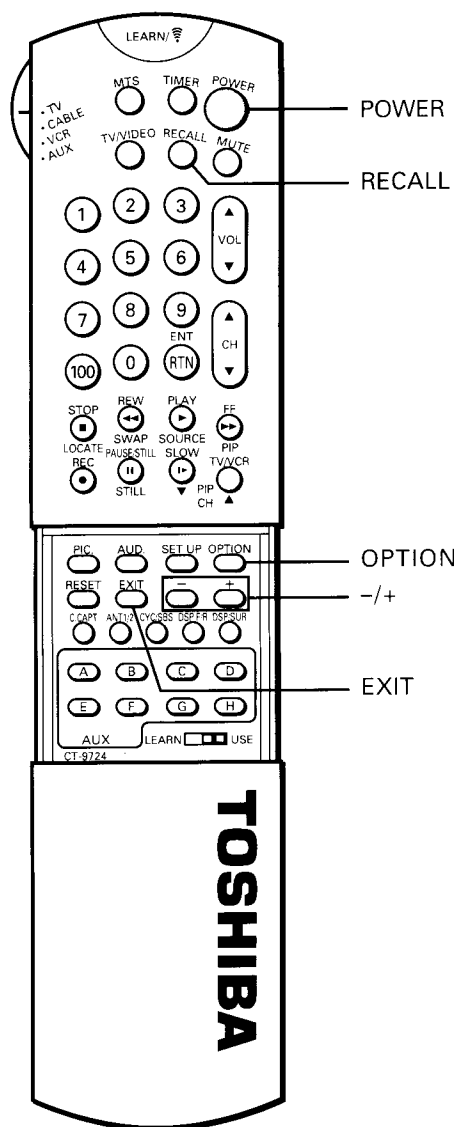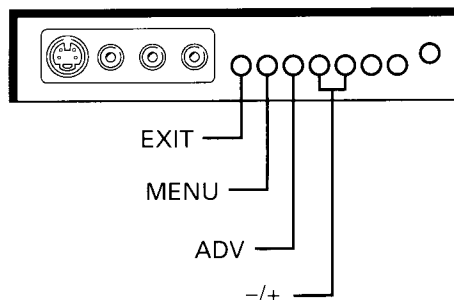

TO START THE AUTO DEMONSTRATION


- 1 Press **OPTION** on the Remote Control (or **MENU** on the TV) to display the OPTION menu on the screen.
- 2 Press **OPTION** repeatedly (or **ADV** on the TV) until "DEMONSTRATION" is displayed in magenta.
- 3 Press **-** or **+** until "DEMO START" is displayed on the screen in magenta. The on-screen demonstration will start after about 6 seconds.

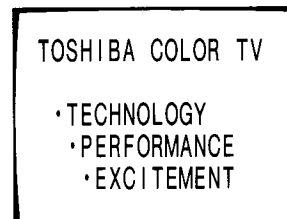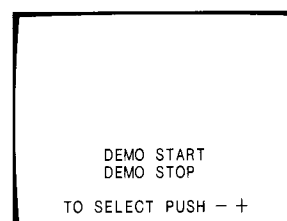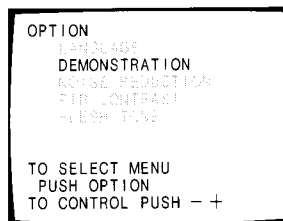

To stop the demonstration

Press **RECALL** or **EXIT**, or select "DEMO STOP" in the step 3 above.

ACTIVATING NOISE REDUCTION/ FLESH TONE FUNCTIONS

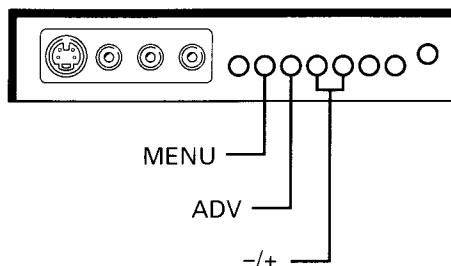

TO REDUCE PICTURE NOISE

This function allows you to reduce visible interference in your TV picture. This is useful when receiving a broadcast with a weak signal or playing back a video cassette or disc damaged by repeated use.

1 Press **OPTION** on the Remote Control (or **MENU** on the TV) to display the OPTION menu on the screen.

OPTION
LANGUAGE
DEMONSTRATION
NOISE REDUCTION
PIP CONTRAST
FLESH TONE

TO SELECT MENU
PUSH OPTION
TO CONTROL PUSH - +

2 Press **OPTION** repeatedly (or **ADV** on the TV) until "NOISE REDUCTION" is displayed in magenta.

3 Press - or + until "NOISE REDUCTION ON" is displayed on the screen in magenta.

NOISE REDUCTION ON
NOISE REDUCTION OFF

TO SELECT PUSH - +

To deactivate this function

Select "NOISE REDUCTION OFF".

TO ACTIVATE FLESH TONE FUNCTION

This function allows you to obtain natural flesh tone by correcting the reference of tint between TV stations.

1 Select "FLESH TONE" following steps 1 and 2 above.

OPTION
LANGUAGE
DEMONSTRATION
NOISE REDUCTION
PIP CONTRAST
FLESH TONE

TO SELECT MENU
PUSH OPTION
TO CONTROL PUSH - +


2 Press - or + until "FLESH TONE ON" is displayed on the screen in magenta.

FLESH TONE ON
FLESH TONE OFF

TO SELECT PUSH - +

To deactivate this function

Select "FLESH TONE OFF".

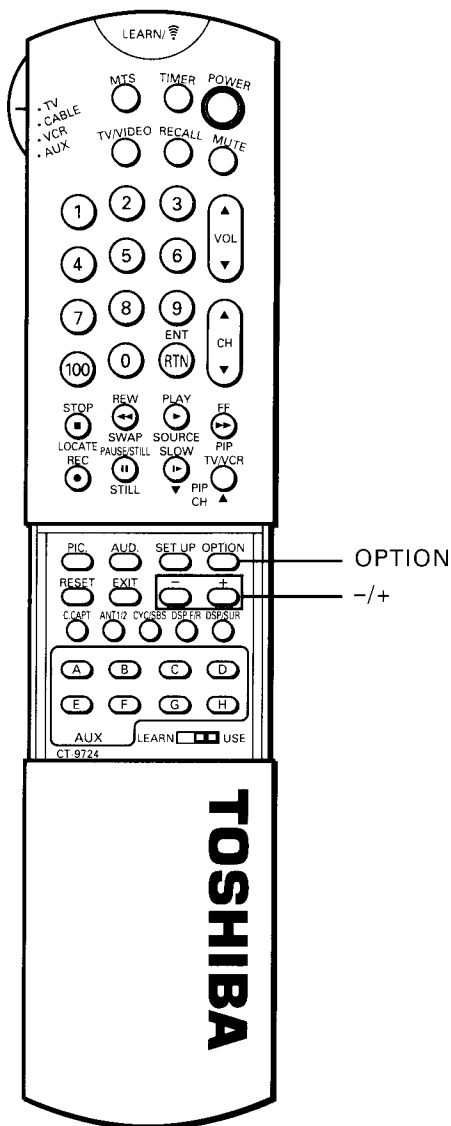


OPTION

-/+

MONITOR PANEL

This TV set is equipped with S-VIDEO INPUT jacks, VIDEO/AUDIO INPUT jacks, VIDEO/AUDIO OUTPUT jacks, VARIABLE AUDIO OUTPUT jacks, PIP AUDIO OUTPUT jacks and EXTERNAL SPEAKER terminals for connecting your desired video/audio equipment.

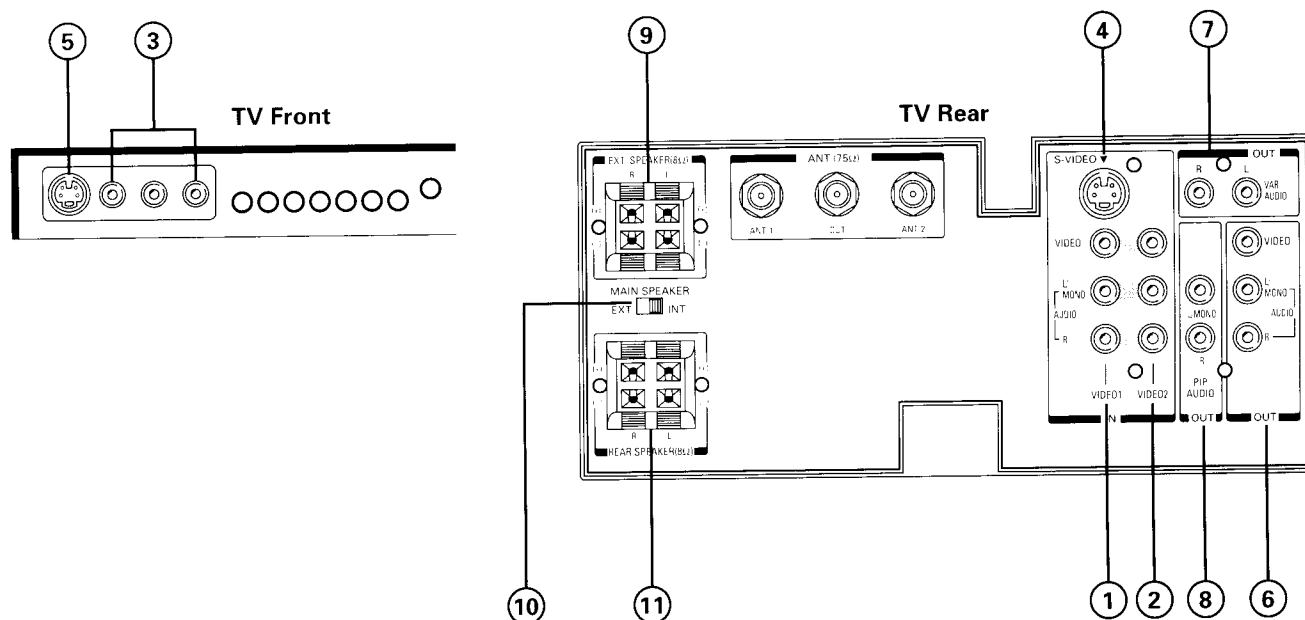

- ① ② **VIDEO 1/VIDEO 2/VIDEO 3 IN Jacks** – provide for direct connection of video devices (VCR, video disc player, camcorder, etc.) with video/audio outputs. Connection details are on pages 48 and 50.
- ③ **S-VIDEO IN Jacks** – provide for direct S-video connection from an **SVHS** VCR or a video disc player. The TV's VIDEO 1/3 audio jacks can also be used to connect the VCR's audio cables. Connection details are on page 49.
- ④ ⑤ **S-VIDEO IN Jacks** – provide for direct S-video connection from an **SVHS** VCR or a video disc player. The TV's VIDEO 1/3 audio jacks can also be used to connect the VCR's audio cables. Connection details are on page 49.
- ⑥ **VIDEO/AUDIO OUT Jacks** – provide fixed-level audio and video outputs from whatever is displayed on the screen. Connection details are on page 51.
- ⑦ **VARIABLE AUDIO OUT Jacks** – feed volume-controlled stereo audio out from whatever is displayed on the screen, allows connection of audio amplifier and lets you adjust sound level with TV's remote. Connection details are on page 52.
- ⑧ **PIP AUDIO OUT Jacks** – provide fixed-level audio outputs from whatever is displayed on the PIP window screen. Connection details are on page 52.
- ⑨ **EXTERNAL SPEAKER Terminals** – provide for direct connection of external speakers.
- ⑩ **MAIN SPEAKER Switch** – lets you turn off TV's built-in speakers so that sound will instead come through speakers connected to EXTERNAL SPEAKER terminals. See page 53 for details.
- ⑪ **REAR SPEAKER Terminals** – provide for direct connection of the supplied Surround Speakers. Connection details are on page 5.


Activating Noise Reduction/ Flesh Tone functions
Monitor panel

ADVANCED
OPERATION


EQUIPMENT
CONNECTIONS

CONNECTING A STANDARD VCR

Connect VIDEO1 or VIDEO2 IN jacks on the TV rear panel to the video/audio output jacks of an installed VCR, video disc player, etc. for playback of video material.

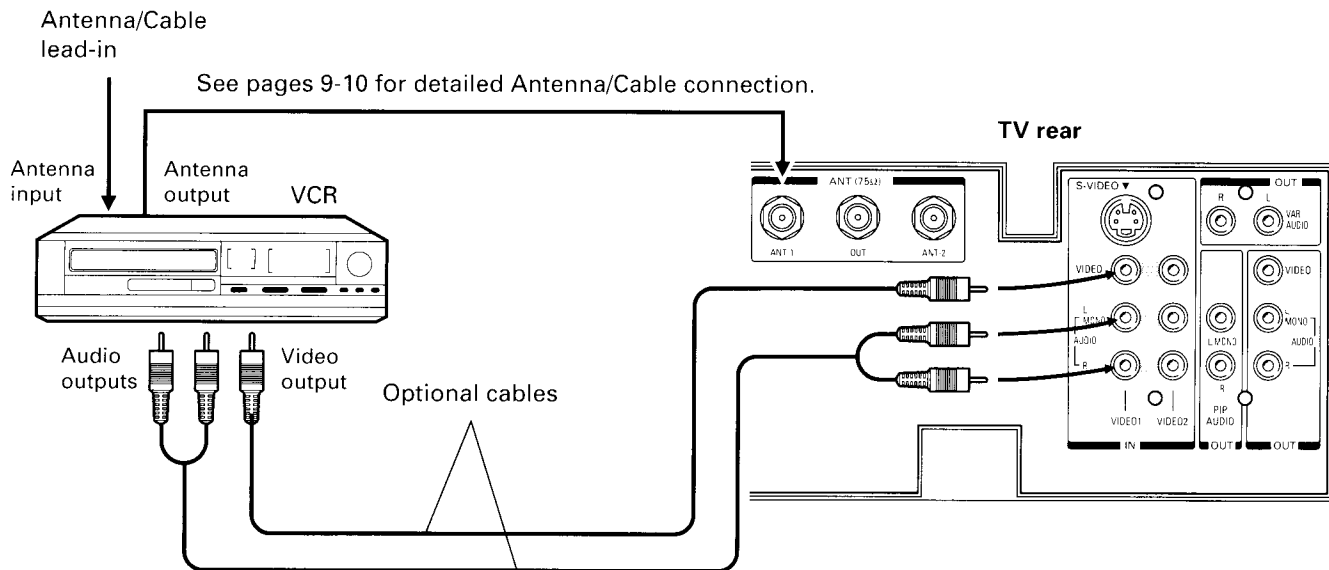

ANT/VIDEO

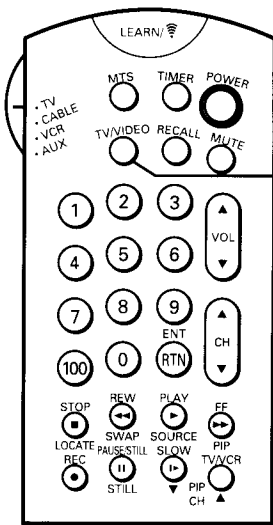


TV/VIDEO

TO SELECT VIDEO INPUT SOURCE

To operate your TV and video equipment properly, refer to the instructions furnished with the video equipment.

- 1 Turn the TV and VCR ON.
- 2 Press **TV/VIDEO** on the Remote Control (or **ANT/VIDEO** on the TV) to select the appropriate source. Each time you press the button, TV, VIDEO 1, VIDEO 2, or VIDEO 3 source will be selected in order.
- 3 Operate your VCR normally.

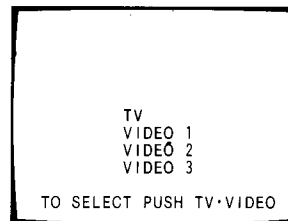


Notes:

- The VIDEO 2 IN jacks can also be used for connecting a second piece of video equipments with video/audio outputs. To view video from equipment connected to the VIDEO 2 IN jacks, select "VIDEO 2".
- If you connect a monaural VCR, connect the audio output of the VCR to the L/MONO jack of VIDEO 1/2/3 on the TV.

CONNECTING A VCR WITH AN S-VIDEO JACK

If you connect a VCR with an S-video jack to the "S-VIDEO" jack on the back of the TV, you must also connect the audio cables to the AUDIO jacks of "VIDEO 1" inputs on the back of the TV. The S-video cable only carries the video signal. Audio signals are separate.

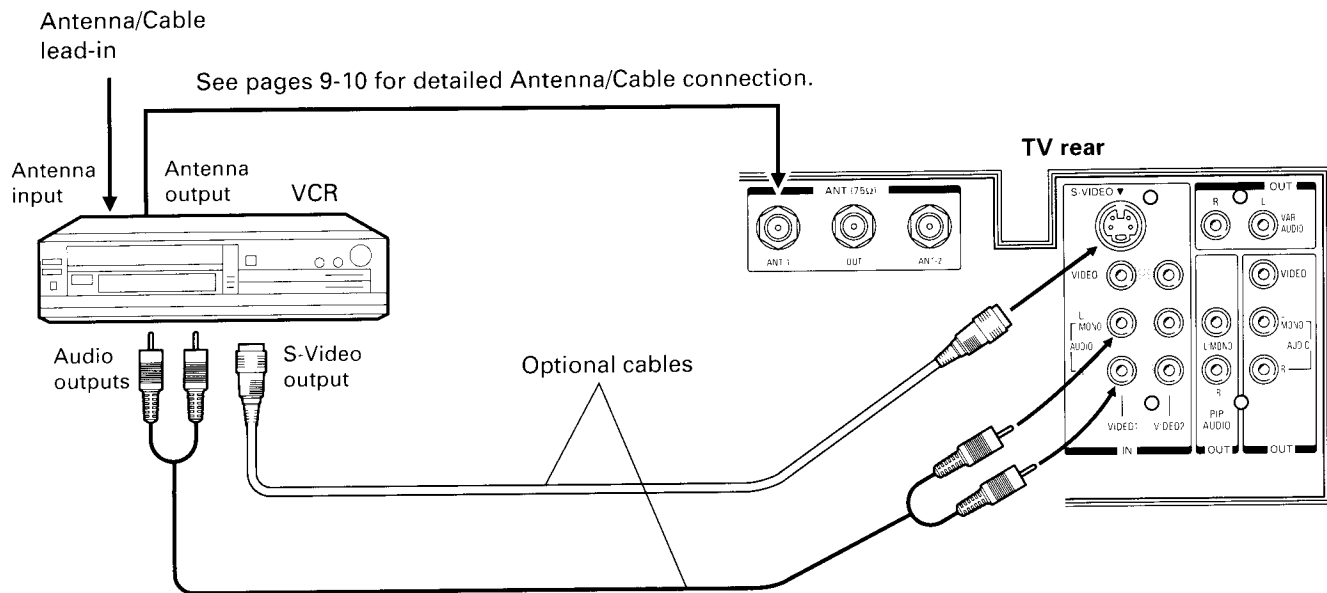

TO SELECT VIDEO INPUT SOURCE

- 1 Turn the TV and VCR ON.
- 2 Press **TV/VIDEO** on the Remote Control (or **ANT/VIDEO** on the TV) to select the "VIDEO 1" mode.
- 3 Operate your VCR normally.

Notes:

- If you connect a monaural VCR, connect the audio output of the VCR to the L/MONO jack of VIDEO 1 on the TV set.
- The S-VIDEO jack has priority over the phone-type (yellow) video jack when both are used.
- The S-VIDEO terminal accepts SEPARATED Luminance/Chrominance (Y-C) signals conforming to the NTSC standard.


CONNECTING A CAMCORDER

This connection allows you to play back tapes in the camcorder and watch them on the TV.

— **If you have a camcorder with an S-video jack**, connect the s-video cable to the S-VIDEO jack of the “VIDEO 3 IN” jacks.

— **If you have a standard camcorder**, connect the video cable to the VIDEO jack of the “VIDEO 3 IN” jacks.

With either video connection, connect the audio cables.

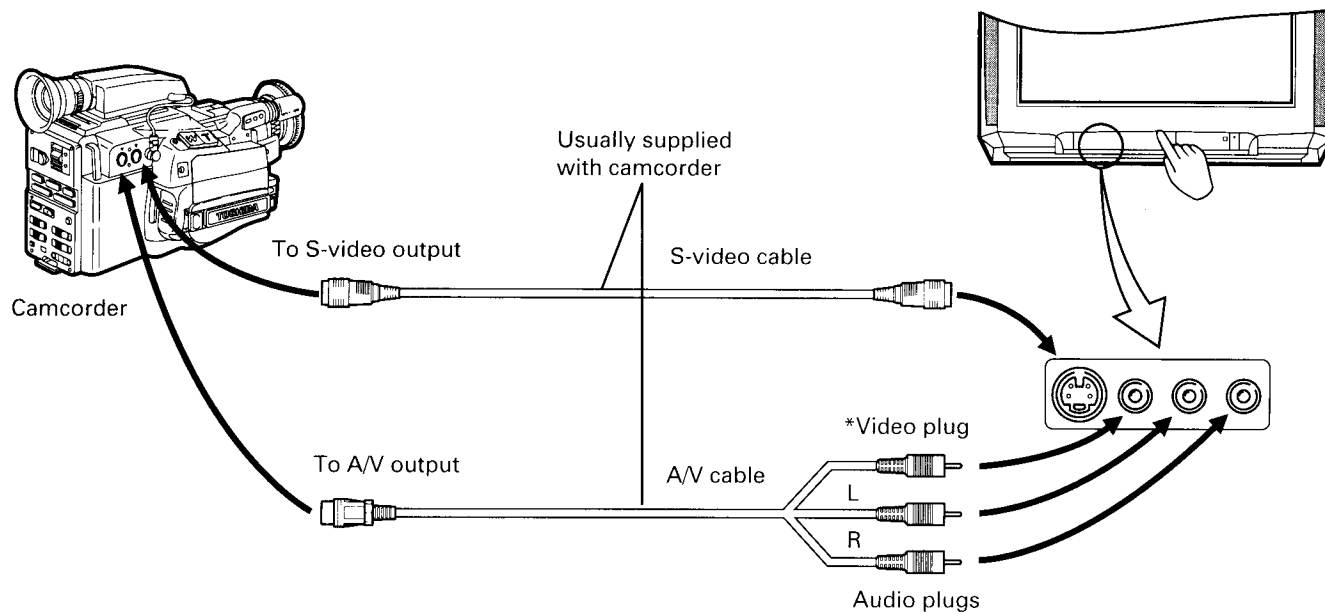

SELECTING VIDEO SOURCES

To operate your TV and camcorder properly, refer to the instructions furnished with the connected camcorder.

- 1 Turn the TV and the camcorder ON.
- 2 Press **TV/VIDEO** on the Remote Control (or **ANT/VIDEO** on the TV) to select the “VIDEO 3” mode.
- 3 Operate your camcorder normally.

Note:


* When the S-video cable is connected to the S-VIDEO INPUT jack, the Video plug does not have to be connected.

- If you connect a monaural camcorder, connect the audio output of the camcorder to the L/MONO jack of VIDEO 3 IN jacks.

DUBBING/EDITING VIDEO TAPES USING 2 VCRs

To dub or edit your own video tapes between one VCR and another, connect the VCR that will play to the input jacks (VIDEO 1, VIDEO 2 or VIDEO 3) on the TV. Then connect the output jacks from the TV to the input jacks on the recording VCR.

Note: Do not connect one VCR to the output and input jacks on the TV at the same time.

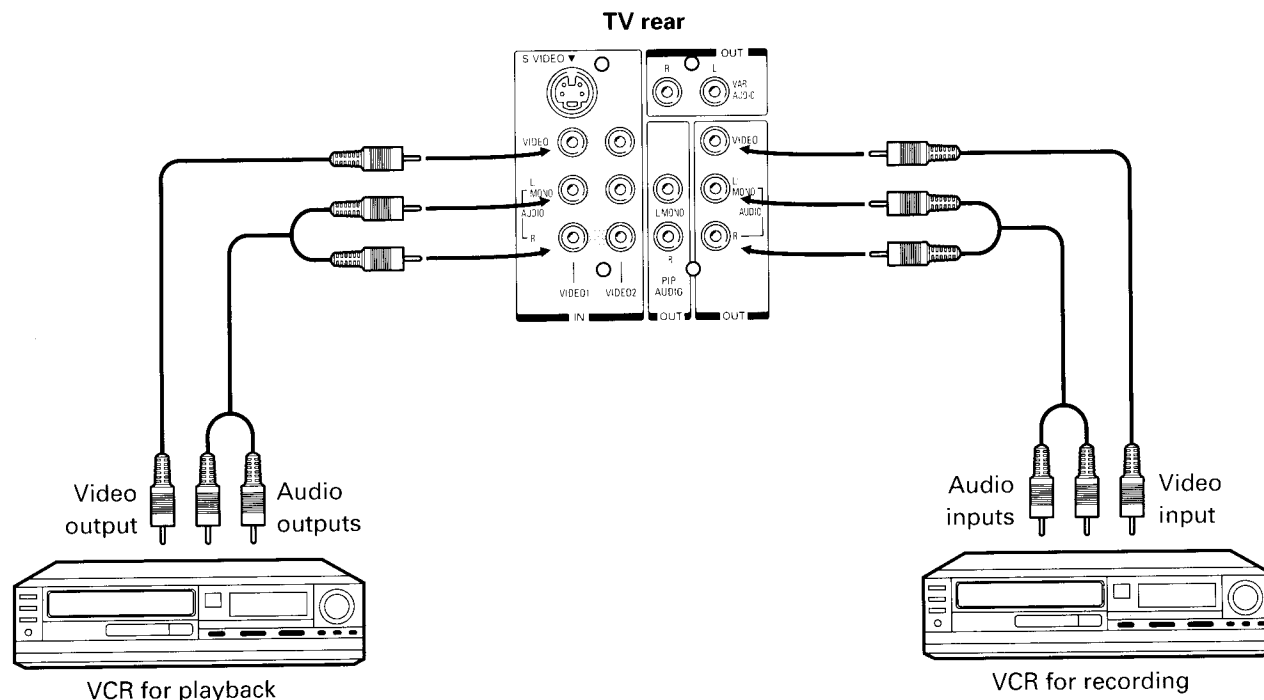

TO MONITOR YOUR DUBBING/EDITING

- 1 Turn the TV and both VCR's ON.
- 2 Press **TV/VIDEO** on the Remote Control (or **ANT/VIDEO** on the TV) to select the "VIDEO 1" mode.
- 3 Set the VCR for recording to record mode and the VCR for playback to play.
- 4 You can view the video tape from the VCR for playback on the TV screen while dubbing it with the VCR for recording.

CAUTION:


The unauthorized recording of television programs, video tapes and other materials may infringe upon the provisions of the copyright laws.

Notes:

- The input switch of VCR is normally in the TV position. Change the switch of recording VCR to the LINE or CAMERA position when using the video/audio inputs of the VCR as above. Some VCR's automatically switch when the cables are plugged into the video/audio inputs.
- The PIP picture cannot be output from the VIDEO OUT jack.

CONNECTING AN AUDIO AMPLIFIER

Connect the VARIABLE AUDIO OUT jacks to the external input jacks on the stereo amplifier. You will be able to change and mute volume with the TV's remote control. You will also be able to control bass, treble and balance functions.

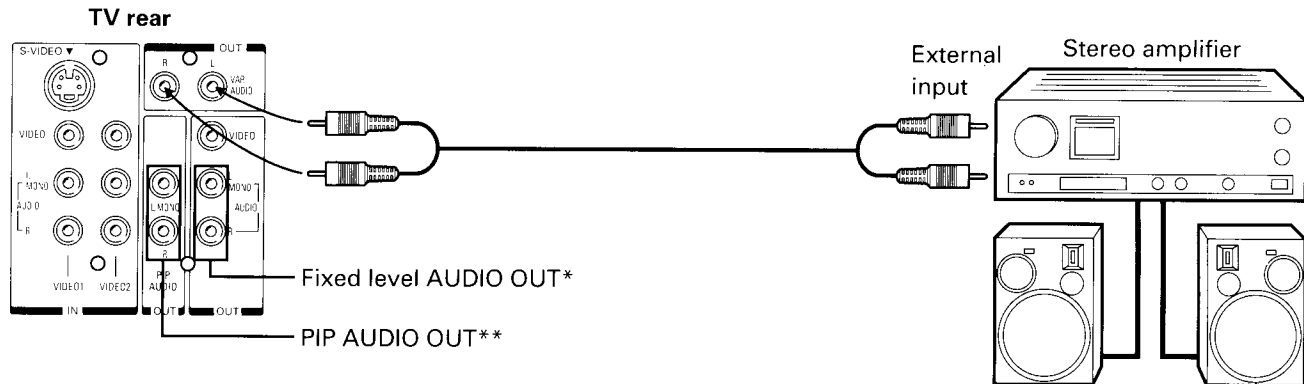

Notes:


- * The "fixed level" audio signal present at the AUDIO jacks of VIDEO/AUDIO OUT jacks is also ideal for connecting an audio cassette recorder (or amplifier) to record audio from the TV. This constant audio signal is not affected by pressing VOLUME buttons on the TV or the TV's remote control.
- ** The "fixed level" audio signal present at the PIP AUDIO OUT jacks is ideal for connecting an audio cassette recorder (or amplifier) to record audio of the TV program displayed on the PIP window screen.

PREPARING FOR USE

- 1 Turn the TV and stereo amplifier ON.
- 2 Adjust the VOLUME control on the TV for a moderate listening level.
- 3 Disconnect the built-in speakers following the instructions at the right.
- 4 Adjust the volume control on the stereo amplifier for a moderate listening level.
- 5 Control of the audio can now be done using the audio function buttons (VOLUME, MUTE, BASS, TREBLE and BALANCE) on the TV's remote control.


TO DISCONNECT THE BUILT-IN SPEAKERS

- 1 Press **AUD** on the Remote Control until "SPEAKERS" in the AUDIO menu is displayed in magenta.

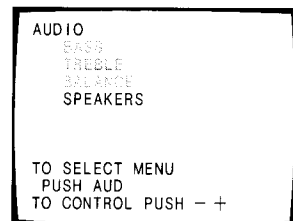

- 2 Press **-** or **+** until "SPEAKERS OFF" is displayed on the screen in magenta.

The built-in main speakers will be disconnected.

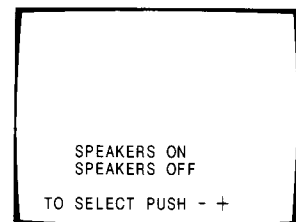

To use the built-in speakers again


Select "SPEAKERS ON" in step 2 above.

Note: If necessary, deactivate the CYCLONE woofer. See page 34.

CONNECTING EXTERNAL SPEAKERS


You can connect speakers to the EXTERNAL SPEAKER terminals on the TV set to enhance sound from the TV.

Before connecting the speakers, turn the TV off.

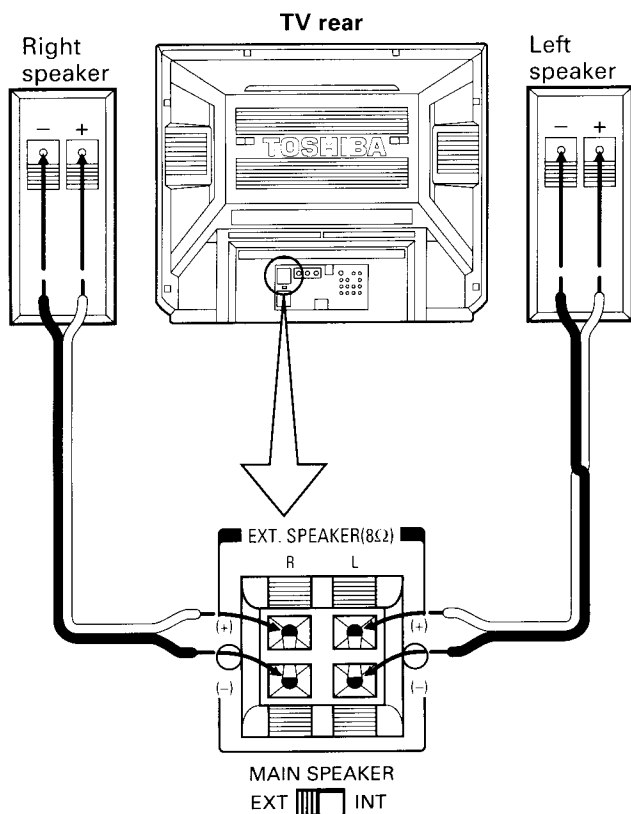

Speaker positioning

To enjoy the sound of the 4-channel DSP Surround, locate the external (main) speakers and supplied Surround Speakers. See page 32 for details on using the DSP feature.

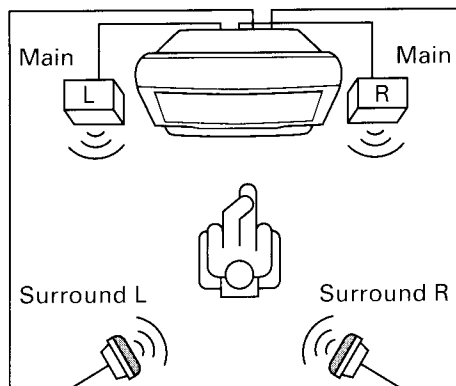

PREPARING FOR USE

- 1 Connect the speaker leads.
While depressing the button, insert the wire. Then, release the button.
Match the right and left channels and +/- polarities of the TV speaker terminals and external speakers.




Twist wire core.

- 2 Set the MAIN SPEAKER switch to "EXT".
The built-in TV speakers are disconnected.



CAUTIONS:

- Do not connect external speakers to more than one audio source at a time. You will damage your equipment if you connect the same speaker system to both the TV and amplifier.
- Use only external speakers with an impedance rating of 8 ohms and input power of 10 W or greater.

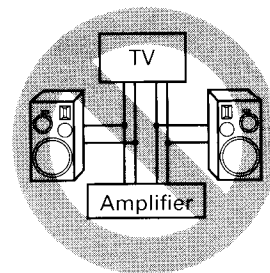

Note: The CYCLONE woofer is not affected by the MAIN SPEAKER switch. If necessary, deactivate the CYCLONE. See page 34.

CLEANING AND CARE

WARNING: TV sets use High Voltage. Do not try to remove the cabinet back. Refer servicing to qualified service personnel.

■ To clean the TV screen:

1. First remove the plug from the power outlet to avoid possible shock hazard.
2. Use a clean cellulose sponge or chamois cloth dampened with a solution of mild detergent and warm water to clean TV screen and trim. Do not use too much water on the TV screen. Water spills into the cabinet may cause damage to the TV. Avoid excess water.
3. Remove any extra moisture with the same cloth or a dry one.

- To maintain the finish and appearance of the cabinet, polish it from time to time with a quality furniture polish.

Note: Never use strong solvents such as thinner, benzene or other chemicals on or near cabinet, as they might damage the finish of the cabinet.

SPECIFICATIONS

TELEVISION SYSTEM	NTSC standard
CHANNEL COVERAGE	VHF: 2 through 13 UHF: 14 through 69 Cable TV: mid band (A-8 through A-1, A through I) super band (J through W) hyper band (AA through ZZ, AAA, BBB) ultra band (65 through 94, 100 through 125)
POWER SOURCE	120V AC, 60Hz
POWER CONSUMPTION	CN32D90: 254W (average) CN35D90: 283W (average)
AUDIO POWER	Main; 10W + 10W Sub-woofer; 13W Rear; 5W + 5W
SPEAKER TYPE	Main Two 3 × 5 inches oval Sub-woofer; One 4 inches round Surround; Two 5 inches round
VIDEO/AUDIO TERMINALS	S-VIDEO INPUT (VIDEO 1/VIDEO 3) Y-INPUT: 1V(p-p), 75 ohm, negative sync. C-INPUT: 0.286V (p-p) (burst signal), 75 ohm VIDEO 1/VIDEO 2/VIDEO 3 INPUT VIDEO: 1V(p-p), 75 ohm, negative sync. AUDIO: 150mV (rms) (30% modulation, 47k ohm) VIDEO/AUDIO OUTPUT VIDEO; 1V(p-p), 75 ohm, negative sync, AUDIO; 150mV (rms) (30% modulation, 4.7k ohm) VARIABLE: AUDIO OUTPUT 0-350mV (rms) (30% modulation, 4.7k ohm) PIP AUDIO OUTPUT 150 mV (rms) (30% modulation, 4.7k ohm) EXTERNAL SPEAKER TERMINALS Accept speakers of impedance 8 ohm,input power 10W or greater REAR SPEAKER TERMINALS Accept the supplied Surround Speakers only
DIMENSIONS	CN32D90: Width; 33-15/32 inches (850mm) Height 27-3/4 inches (705mm) Depth 22-41/64 inches (575mm) CN35D90: Width; 36-39/64 inches (930mm) Height 30-47/64 inches (780.5mm) Depth 25-19/32 inches (650mm)
MASS	CN32D90: 146.6lbs (66.5kg) CN35D90: 175.7lbs (79.7kg)

Design and specifications are subject to change without notice.

BEFORE CALLING SERVICE PERSONNEL

Before calling service personnel, please check the following chart for a possible cause of the problem you are experiencing. A minor adjustment on your part may eliminate the problem and restore your TV reception.

Symptoms	Check	Adjustments
● No picture, no sound	<ul style="list-style-type: none"> ● Be sure power cord is plugged in. ● May be station trouble. ● Check antenna connections. ● Check antenna for broken wires. 	<ul style="list-style-type: none"> ● Press POWER button. ● Try another channel.
● No sound, picture OK	<ul style="list-style-type: none"> ● May be station trouble. ● Check if SPEAKERS ON/OFF function (page 52) or MAIN SPEAKER switch (page 53) is properly set. 	<ul style="list-style-type: none"> ● Try another channel. ● Adjust VOLUME.
● Poor sound, picture OK	<ul style="list-style-type: none"> ● May be station trouble. ● Check antenna connections. ● May be local interference from appliance. ● Check if SPEAKERS ON/OFF function or MAIN SPEAKER switch is properly set. 	<ul style="list-style-type: none"> ● Try another channel. ● Adjust VOLUME. ● Adjust BASS, TREBLE, or BALANCE control. ● Re-orient antenna.
<ul style="list-style-type: none"> ● Poor picture, sound OK ● Snowy picture ● Lines in picture ● Distorted picture ● Weak picture 	<ul style="list-style-type: none"> ● May be local interference from appliance. ● Check antenna connections. ● Check antenna for broken wires. ● May be station trouble. 	<ul style="list-style-type: none"> ● Try another channel. ● Adjust BRIGHTNESS. ● Adjust CONTRAST. ● Adjust SHARPNESS. ● Re-orient antenna.
● Poor reception of broadcast channels	<ul style="list-style-type: none"> ● Check antenna connections. ● Check antenna for broken wires. ● If VCR is connected, check TV/VCR switch. 	<ul style="list-style-type: none"> ● Try another channel. ● Re-orient antenna.
● No UHF, VHF OK	<ul style="list-style-type: none"> ● Be sure TV•CABLE function (page 24) is in "TV" mode. 	
● Unable to select a certain channel	<ul style="list-style-type: none"> ● That channel may be locked out with CH LOCK function (page 40), or erased with the ADD/ERASE function (page 25). 	
● Multiple images (ghosts)	<ul style="list-style-type: none"> ● May be station trouble. ● Check antenna connections. 	<ul style="list-style-type: none"> ● Try another channel. ● Re-orient antenna.
● Poor color or No color	<ul style="list-style-type: none"> ● May be station trouble. ● Check antenna connections. ● Check antenna for broken wires. ● May be local interference from appliance. ● Check if station is broadcasting in color. ● If you change the direction of the TV while the TV is activated, the picture may suffer from color shading. If so, turn off the TV and allow for about 30 minutes to cool, then turn on the TV again. The picture should improve. 	<ul style="list-style-type: none"> ● Try another channel. ● Re-orient antenna. ● Adjust TINT. ● Adjust COLOR.
● No stereo or SAP sound from a known MTS broadcast	<ul style="list-style-type: none"> ● Check if MTS button is properly set. 	
● Remote control does not work	<ul style="list-style-type: none"> ● Check if TV/CABLE/VCR/AUX switch is properly set. ● Be sure power cord is plugged in. ● Check battery in Remote Control. 	<ul style="list-style-type: none"> ● Change batteries.

LIMITED WARRANTY

Toshiba America Consumer Products, Inc. ("TACP") and Toshiba Hawaii Inc. ("THI") make the following limited warranties. These limited warranties extend to the original consumer purchaser or any person receiving this set as a gift from the original consumer purchaser and to no other purchaser or transferee.

Limited One (1) Year Warranty

TACP and THI warrant this product and its parts against defects in materials or workmanship for a period of one (1) year after the date of original retail purchase. During this period, TACP and THI will repair a defective product or part, without charge to you. Authorized TACP/THI service station personnel will come to you home when warranty services required. Depending on the type of repair required, the service will either be performed in your home or the set will be taken to the authorized TACP/THI service station for repair and returned to your home at no cost to you.

Limited Two (2) Year Warranty of Picture Tube

TACP and THI further warrant the picture tube in this product against defects in materials or workmanship for a period of two (2) years after the date of original retail purchase. During this period, TACP and THI will replace a defective picture tube without charge to you, except that if a defective picture tube is replaced after one (1) year from the date of the original retail purchase, you pay labor charges involved in the replacement.

Owner's Manual and Registration Card

You should read this owner's manual thoroughly before operating this product. You should also insure that your name and address are on file as owner of a TACP/THI product by completing and mailing the enclosed registration card within ten days after you, or the person who has given you this product as a gift, purchased this product. This is one way to

enable TACP/THI to provide you with better customer service and improved products. Failure to return the card will not affect your rights under this warranty so long as you retain other proof of purchase such as a bill of sale.

Your Responsibility

The above warranties are subject to the following conditions:

- (1) You must retain your bill of sale or provide other proof of purchase.
- (2) All warranty servicing of this product must be made by an Authorized TACP/THI Service Station.
- (3) These warranties are effective only if the product is purchased and operated in the U.S.A.
- (4) Labor service charges for set installation, set up, adjustment of customer controls and installation or repair of antenna systems are not covered by this warranty. Reception problems caused by inadequate antenna systems are your responsibility.
- (5) Warranties extend only to defects in materials or workmanship as limited above and do not extend to any product or parts which have been lost or discarded by you or to damage to products or parts caused by misuse, accident, improper installation, improper maintenance or use in violation of instructions furnished by us; or to units which have been altered or modified without authorization of TACP/THI or to damage to products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

Step-By-Step Procedures-How to Obtain Warranty Service

If, after following all of the operating instructions in this manual and checking the section "BEFORE CALLING SERVICE PERSONNEL", you find that service is needed:

- (1) Contact one of the TACP/THI Service Centers listed below for warranty service or call the TACP toll free number **800-631-3811** within thirty (30) days after you find a defective product or part to find the nearest TOSHIBA Authorized Service Station or authorized TOSHIBA Dealer.
- (2) Please present your bill of sale or other proof to the Authorized Service Station. "Authorized TACP/THI service station personnel will come to you home when warranty services required. Depending on the type of repair required, the service will either be performed in your home or the set will be taken to the authorized TACP/THI service station for repair and returned to your home at no cost to you."
- (3) If you have any question about service, please contact one of the following TACP/THI Service Centers:

IN THE CONTINENTAL UNITED STATES
Should your unit require service, Call



NORTHEAST	MIDWEST	WEST	SOUTHEAST	SOUTHWEST	HAWAII
82 Totowa Road, Wayne, New Jersey 07470	1010 Johnson Drive, Buffalo Grove, Illinois 60089-6900	5490 E. Francis St., Ontario, California 91761	6115 Jimmy Carter Blvd., Suite C2, Norcross, Georgia 30071-4607	1421 Champion Drive, Suite 304, Carrollton, Texas 75006	327 Kamakee Street, Honolulu, Hawaii 96814

ALL WARRANTIES IMPLIED BY STATE LAW, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE EXPRESSLY LIMITED TO THE DURATION OF THE LIMITED WARRANTIES SET FORTH ABOVE. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. **WITH THE EXCEPTION OF ANY WARRANTIES IMPLIED BY STATE LAW AS HEREBY LIMITED, THE FOREGOING EXPRESS WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, GUARANTEES, AGREEMENTS AND SIMILAR OBLIGATIONS OF MANUFACTURER OR SELLER WITH RESPECT TO THE REPAIR OR REPLACEMENT OF ANY PRODUCT OR PARTS.**

NO EVENT SHALL TACP OR THI BE LIABLE FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES. Some states do not allow the exclusion or limitation of incidental or consequential damages so the above limitation may not apply to you.

No person, agent, distributor, dealer, service station or company is authorized to change, modify or extend the terms of these warranties in any manner whatsoever. The time within which an action must be commenced to enforce any obligation of TACP and THI arising under this warranty or under any statute, or law of the United States or any state thereof, is hereby limited to one year from the date you discover or should have discovered, the defect. This limitation does not apply to implied warranties arising under state law. Some states do not permit limitation of the time within which you may bring an action beyond the limits provided by state law so the above provision may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

TOSHIBA AMERICA CONSUMER PRODUCTS, INC.

HEAD OFFICE/82 TOTOWA ROAD, WAYNE, NEW JERSEY 07470

FACTORY SERVICE CENTERS/NORTHEAST: 82 TOTOWA ROAD, WAYNE, NEW JERSEY 07470

MIDWEST: 1010 JOHNSON DRIVE, BUFFALO GROVE, ILLINOIS 60089-6900

WEST: 5490 E. FRANCIS ST., ONTARIO, CALIFORNIA 91761

SOUTHWEST: 1421 CHAMPION DRIVE, SUITE 304 CARROLLTON, TEXAS 75006

SOUTHEAST: 6115 JIMMY CARTER BLVD., SUITE C2, NORCROSS, GEORGIA 30071-4607

TOSHIBA HAWAII, INC.

HEAD OFFICE/327 KAMAKEE STREET, HONOLULU, HAWAII 96814, U.S.A. PHONE: (808)521-5377

MANUFACTURED BY

TOSHIBA AMERICA CONSUMER PRODUCTS, INC.

PRINTED IN USA

(94-07)

TOSHIBA

23562077